

## Manual



Expert Net Control 2111  
Expert Net Control 2191



© 2023 GUDE Systems GmbH  
Manual Ver. 1.6.0  
from Firmware Ver. 1.6



# Table of contents

<b>1.</b>	<b>Device Description</b>	<b>5</b>
1.1	Security Advice .....	6
1.2	Content of Delivery .....	6
1.3	Description .....	6
1.4	Installation .....	8
1.4.1	Terminal Assignment .....	9
1.5	Redundant Voltage Supply .....	10
1.6	Technical Specifications .....	11
1.7	Sensor .....	11
1.7.1	Calibration .....	15
<b>2.</b>	<b>Operating</b>	<b>16</b>
2.1	Operating the device directly .....	17
2.2	Control Panel .....	18
2.3	Maintenance .....	20
2.3.1	Maintenance Page .....	23
2.3.2	Configuration Management .....	24
2.3.3	Bootloader Activation .....	25
<b>3.</b>	<b>Configuration</b>	<b>28</b>
3.1	Output Ports .....	29
3.1.1	Watchdog .....	30
3.2	Input Ports .....	32
3.3	Ethernet .....	33
3.3.1	IP Address .....	33
3.3.2	IP ACL .....	35
3.3.3	HTTP .....	36
3.4	Protocols .....	37
3.4.1	Console .....	38
3.4.2	Syslog .....	40
3.4.3	SNMP .....	40
3.4.4	Radius .....	42
3.4.5	Modbus TCP .....	44
3.4.6	MQTT .....	45
3.5	Clock .....	46
3.5.1	NTP .....	46
3.5.2	Timer .....	47
3.5.3	Timer Configuration .....	47
3.6	Sensors .....	54
3.6.1	Port Switching .....	55
3.7	E-Mail .....	56

# Table of contents

3.8	Front Panel .....	58
<b>4.</b>	<b>Specifications</b>	<b>59</b>
4.1	Automated Access .....	60
4.2	Console .....	60
4.2.1	SSH .....	65
4.2.2	Console Cmd 2111 .....	66
4.3	HTTP Authentication .....	76
4.4	IP ACL .....	78
4.5	IPv6 .....	78
4.6	Messages .....	79
4.7	Modbus TCP .....	81
4.7.1	Sensor Tables .....	87
4.8	MQTT .....	87
4.8.1	Example HiveMQ .....	89
4.9	Radius .....	90
4.10	SNMP .....	91
4.10.1	Device MIB 2111 .....	94
4.11	SSL .....	95
<b>5.</b>	<b>Support</b>	<b>98</b>
5.1	Data Security .....	99
5.2	HTTP Performance .....	99
5.3	Contact .....	100
5.4	Declaration of Conformity .....	100
5.5	FAQ .....	101
<b>Index</b>		<b>103</b>

# Device Description

## 1 Device Description

### 1.1 Security Advice

---

- The device may only be installed and used by qualified personnel. The manufacturer accepts no liability for damage or injury caused by improper use of the device.
- It is not possible for the customer to repair the device. Repairs may only be carried out by the manufacturer.
- The device may only be connected to a 230 volt AC mains supply (50 Hz or 60 Hz) by means of a low-voltage power supply unit (12V).
- The power cables, plugs and sockets used must be in perfect condition.
- This equipment is designed for indoor use only. It must not be used in humid or excessively hot environments.
- Please observe the other instructions in the manual for the proper handling of the device.
- Please also observe the safety instructions and operating instructions for the other devices that are connected to the unit.
- The device is not a toy. It must not be stored or operated within the reach of children.
- Do not leave packaging material lying around carelessly. Plastic foils/ bags, polystyrene parts etc. could become a dangerous toy for children. Please recycle the packaging material.
- If you are not clear about the correct connection or if any questions arise that are not clarified by the operating instructions, please contact our support.

### 1.2 Content of Delivery

---

The package includes:

- **Expert Net Control 2111**
- Power Supply Unit 7903 (12V DC, 1 A) (only ENC 2111-1)
- Quick Start Guide

### 1.3 Description

---

The **Expert Net Control 2111** can switch 4 different relay outputs and monitor 12 passive signal inputs. The device has the following features:

- 4 switchable, potential-free relay outputs with change-over connectors (NO and NC), high switching voltage 36 V, 3 A
- Relays dispose of high contact reliability also at very small loads
- 12 passive inputs for monitoring NO and NC devices, e.g. door contacts, smoke detectors, leakage sensors etc.
- Each signal input includes a 12 V connector for supply of NO/NC devices
- A clearly visible LED display on the device reveals total current, IP address, sensor data and error reports
- LED display for status of power supply, inputs/outputs


# Device Description

- 2 inputs for redundant power supply (12 V DC) via 2 external power supply units (one included in delivery)
- For 2111-2 additional power supply by Power-over-Ethernet (PoE) possible
- 4 interfaces for optional sensors for environmental monitoring
- Console commands via SSH, Telnet and serial interface
- SSH support with public key and passwords
- Individually parameterisable switch-on delay of all outputs
- Programmable timetables and turn-on/turn-off sequences
- Individually adjustable watchdog for each output, which switches depending on accessibility (network ping)
- Dual TCP/IP stack with IPv4 and IPv6 support (IPv6-ready)
- Control and monitoring of the device via Ethernet with an integrated web server with SSL encryption (TLS 1.1, 1.2, 1.3)
- Control and configuration with CGI parameters and JSON messages via HTTP (REST API)
- SNMP (v1, v2c and v3, traps)
- MQTT 3.1.1 Support
- Modbus TCP support
- Radius support
- Generation of messages (e-mail, syslog and SNMP traps) and switching of relays depending on sensor measurement limits
- Firmware update during operation via Ethernet possible
- Encrypted e-mails (SSL, STARTTLS)
- Access protection through IP access control
- Low own consumption
- Developed and produced in Germany

## 1.4 Installation




1. Sensor Information (7-segment display)
2. OK Button
3. Select Button
4. 12 LED's signaling the state of the Inputs
5. LED display for power supply (1 = Pwr1, 2 = Pwr2, 3 = Pwr3 (POE) )
6. 4 plain text displays (on/off) for the state of the Output Ports
7. Status LED

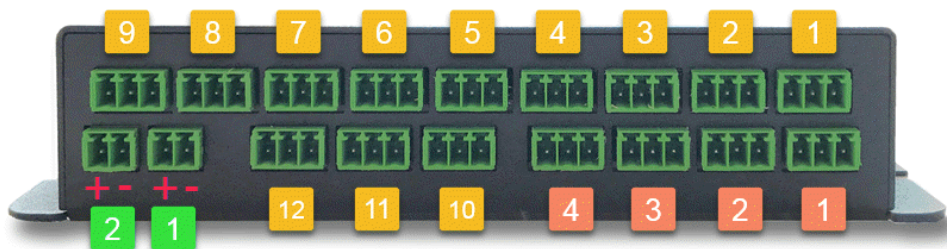

- 12 passive inputs (yellow)
- 4 potential-free relay outputs (red)
- 2 Connectors (Pwr1 + Pwr2) for power supply 12 V DC, 1 A (green)



# Device Description

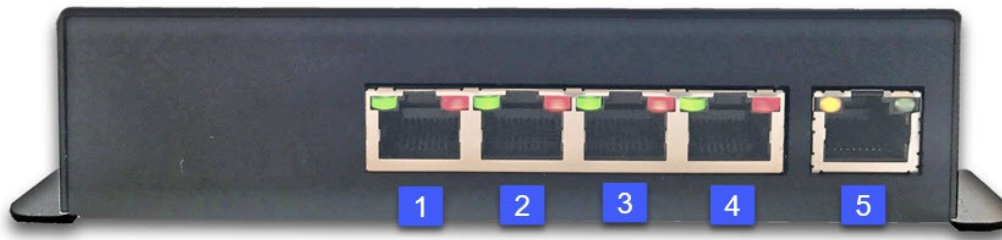

1. Connector Sensor Port 1
2. Connector Sensor Port 2
3. Connector Sensor Port 3 (RS485)
4. Connector Sensor Port 4 (RS232)
5. Ethernet connector (RJ45) (with Pwr3 = POE **only ENC 2111-2**)

## Power Supply


If the device has PoE or a second input for the supply voltage, all voltage sources can be connected at the same time. This allows redundancy in the power supply.

## Start-up the device

- Connect the device (Pwr1 oder Pwr2) to the AC Adaptor (12 V DC, 1 A).
- Optional connect the device to a second AC Adaptor (12 V DC, 1 A).
- Plug the network cable into the Ethernet (RJ45).
- Attach the optional external sensors to the connectors.
- Attach the antenna and insert the SIM card into the card slot (only **ENC 2191**).
- Connect the passive inputs and relay outputs to compatible devices.


### 1.4.1 Terminal Assignment

The terminal assignment of the terminals is printed on the housing surface:

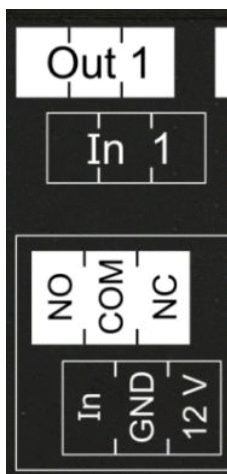


This means that there is only a connection between the center pin (COM) and the NC-pin (Normally Closed) for the output ports in the "Off" state. If the relay is in the "On" state, then there is only contact from the center pin (COM) to the NO-pin (Normally Open).

The digital signal inputs (input ports) go to the logic state "LOW" when the pin "In" and the center pin "GND" are bridged, otherwise the state is "High". The text outputs associated with the "Low" and "High" states can be defined in the Input Ports configuration<sup>[32]</sup>. In the default configuration, the logic states are inverted so that the state "High" is assumed for a bridged contact. In addition, a 12 V power supply can be activated in the Sensor configuration<sup>[54]</sup> on the 12V-pin. The power of the 12 V supply (high = 600 mA, low = 400 mA) is adjustable.

 As an alternative to the connection of "In" and "GND", voltages of up to 24 V (=  $V_{In_{max}}$ ) can be connected to the input "In". For voltages less than 3 V the state goes to "Low", for voltages greater than 8 V the "High" state is assigned.

Input	Logic	Logic inverted (Fabdefault)
open closed	High / on / closed Low / off / open	low / off / open High / on / closed
Voltage < 3V > 8V otherwise	Low / off / open High / on / closed undefined	High / on / closed Low / off / open undefined

 Event messages are generated when the logic changes. In the sensor configuration the logic can be inverted. So that "High" appears when the input is closed, the logic is configured as inverted as fabdefault. In protocols with numeric values (e.g. SNMP or ModbusTCP) a "1" is considered as High, and a "0" as Low.

## 1.5 Redundant Voltage Supply

---

If the device (**only ENC 2111-2**) and the connected switch support Power-over-Ethernet, the power supply via PoE has priority and the device is powered only via PoE. Alternatively, the device can be supplied via up to two power supply units. If both power supplies are connected at the same time, the current is split up. The current distribution depends on the difference between the output voltages of the two power supplies.

## 1.6 Technical Specifications

Interfaces	2 x sockets for ext. power supply 4 x switchable outputs 12 x passive signal inputs 4 x RJ45 for optional sensors 1x Ethernet connector RJ45
Network connectivity	10/100 MBit/s 10baseT Ethernet
Power Supply	AC Adaptor (12V DC, 1 A) Power-over-Ethernet Module
PoE Module (only ENC 2111-2)	802.3af (802.3at Type 1) PoE, Class 0
Environment <ul style="list-style-type: none"><li>• Operating temperature</li><li>• Storage temperature</li><li>• Humidity</li></ul>	0°C - 50 °C -20°C - 70 °C 0% - 95% (non-condensing)
Case	Powdered steel case
Measurements	139 mm x 91 mm x 34 mm (L x H x D) 159 mm x 91 mm x 34 mm (L x H x D) (with flaps)
Weight	approx. 460 g
Plug for power supply connection	System terminal 2-pole - AK1550/2-3.5-GREEN
Connector for switching outputs and signal inputs	System terminal 3-pole - AK1550/3-3.5-GREEN

## 1.7 Sensor

Four external sensors can be connected to the **Expert Net Control 2111**. The following sensors are currently available




7101



7104 - 7106

# Device Description

Product Name	7101 (End-of-Life)	7104-1	7105-1	7106-1
Calibrated Sensor	-	7104-2	7105-2	7106-2
Cable Length	≈ 2m	≈ 2m	≈ 2m	≈ 2m
Connector	RJ45	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	-	0-100%, ±3% (typical), 10-80% ±2% (typical)	0-100%, ±3% (typical), 10-80% ±2% (typical)
air pressure range (full)	-	-	-	± 1 hPa (typical) at 300 ... 1100 hPa, 0 ... +40 °C
air pressure range (ext)	-	-	-	± 1.7 hPa (typical) at 300 ... 1100 hPa, -20 ... 0 °C
Protection	IP68	-	-	-

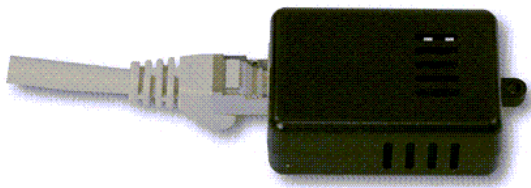

7201, 7202



7205, 7206

Product Name	7201 (End-of-Life)	7202 (End-of-Life)	7205	7206
Connector	RJ45	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	0-100%, ±3% (typical)	0-100%, ±3% (typical), 10-80% ±2% (typical)	0-100%, ±3% (typical), 10-80% ±2% (typical)
air pressure range (full)	-	-	-	± 1 hPa (typical) at 300 ... 1100 hPa, 0 ... +40 °C
air pressure range (ext)	-	-	-	± 1.7 hPa (typical) at 300 ... 1100 hPa, -20 ... 0 °C

# Device Description



7207, 7209, 7210


Product Name	7207	7209	7210
Connector	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	0-100%, ±3% (typical), 10-80% ±2% (typical)	0-100%, ±3% (typical), 10-80% ±2% (typical)
air pressure range (full)	-	-	± 1 hPa (typical) at 300 ... 1100 hPa, 0 ... +40 °C
air pressure range (ext)	-	-	± 1.7 hPa (typical) at 300 ... 1100 hPa, -20 ... 0 °C
Inputs	2x	2x	2x

## Technical data inputs

Inputs	digital input, internal pull-up active: max. 24V, < 3V Low, > 8V High passive: switching contact
Terminal	3-pole - AK1550/3-3.5-GREEN

## Behavior inputs

Input	Logic	Logic inverted (Fabdefault)
open closed	High / on / closed Low / off / open	low / off / open High / on / closed
Voltage < 3V > 8V otherwise	Low / off / open High / on / closed undefined	High / on / closed Low / off / open undefined

 Event messages are generated when the logic changes. In the sensor configuration the logic can be inverted. So that "High" appears when the input is closed, the logic is configured as inverted as fabdefault. In protocols with numeric values (e.g. SNMP or

# Device Description

ModbusTCP) a "1" is considered as High, and a "0" as Low.




Connection of 4-core alarm cable



7313

Leakage Point Sensor 7313	
Cable length	≈ 2,5m
Connector	4-w ire cable
operating temperature	-10 °C - 40 °C
operating voltage	12 V DC
Output	max. 200 mA

 For the connected leakage point sensor 7313 to work, the 12 V power supply must be activated in the sensor configuration [\[54\]](#).

The sensors are detected automatically after connection. The green LED on the RJ45 sensor connector then lights up permanently. If the sensor value is displayed permanently on the display, the green LED flashes. The sensor values are displayed directly on the "Control Panel" website:

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.2	5.9	16.6	1013.8

A click on the link in the "Name" column opens the display of the Min and Max values. The values in a column can be reset using the "Reset" button. The "Reset" button in the name column deletes all stored Min and Max values.

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.4	6.1	16.5	1013.8
	30m min	0.0	34.1	5.9	16.4	125.0
	30m max	22.6	34.7	6.2	300.0	1013.8
	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>

# Device Description

If external sensors with inputs are connected, these are also added on the "Control Panel" web page:

Port	Name	logical state	time since transition	toggle count
2: 7207 - I1	Extern Input	● 0: off / open	1d 03:48:48	0
2: 7207 - I2	Extern Input	● 0: off / open	1d 03:48:48	0

## 1.7.1 Calibration

From this firmware version it is possible to store a value offset in the sensor for internal sensors (Expert Sensor Box) or external sensors. This offset is zero ex works, because the sensors are normally not calibrated. The offset can be specified by the following commands via Telnet / SSH:

```
extsensor {port_num} {sen_field} calib set {float}  
extsensor {port_num} {sen_field} calib show
```

 For internal sensors (such as the Expert Sensor Box), the internal sensor port is 1.

### External Sensor Field Table "{sen\_field}".

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
3	Air pressure	hPa

**Operating**




## 2 Operating

### 2.1 Operating the device directly

---



### Port Switching

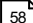The current switching state of the output is indicated by the corresponding plain text displays (port LEDs). If the green "on" LED is lit, the port is switched on, if the red "off" LED is lit, the output port is switched off. The buttons "Select" and "Ok" are located on the device. If you press "select", you can select the following modes one after the other (in the front panel  configuration you can deactivate the modes "All on" or "All off").

1. All on (PALL in the display): All LEDs flash green. If you press the "Ok" button for 2.5 seconds, all ports are switched on.
2. All off (PALL in the display): All LEDs flash red. If you hold the "Ok" button for 2.5 seconds, all ports are switched off.
3. If you press "Select" again, the LED for the first output starts flashing, i.e. the output is selected. Press "Select" again to select the next output. Pressing and holding the "Ok" button for one second will toggle the state of the selected output.

 If the ports are already "All on" or "All off", the corresponding mode is skipped.

### Display Information

If no port is selected manually, repeatedly pressing the "ok" key will show the IP-address and the values of the external sensors on the display.

### Status-LED

The Status LED shows the different states of the device:

- red: The device is not connected to the Ethernet.
- orange: The device is connected to the Ethernet and waits for data from the DHCP server.
- green: The device is connected to the Ethernet and the TCP/IP settings are allocated.
- periodic blinking: The device is in Bootloader mode.

## 2.2 Control Panel

Access the web interface: `http://IP-address` and log-in.

1:Output Port **off**

2:Output Port **off**

3:Output Port **off**

4:Output Port **off**

All On All Off

Port	Name	logical state	time since transition	toggle count
Input 1	Input	● 0: off / open	00:05:44	0
Input 2	Input	● 0: off / open	00:05:44	0
Input 3	Input	● 0: off / open	00:05:44	0
Input 4	Input	● 0: off / open	00:05:44	0
Input 5	Input	● 0: off / open	00:05:44	0
Input 6	Input	● 0: off / open	00:05:44	0
Input 7	Input	● 0: off / open	00:05:44	0
Input 8	Input	● 0: off / open	00:05:44	0
Input 9	Input	● 0: off / open	00:05:44	0
Input 10	Input	● 0: off / open	00:05:44	0
Input 11	Input	● 0: off / open	00:05:44	0
Input 12	Input	● 0: off / open	00:05:44	0

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
4: 7186	7186	22.2	63.2	14.9	7.3	998.2


Pwr 1 Supply 12V 1 ● Off

Pwr 2 Supply 12V 2 ● On

Sensor Pwr 1 3.3V Sensor ● On

Sensor Pwr 2 12V Sensor ● Off

The web page provides an overview of the switching status, the status of the inputs and the power supply. As well as the external sensors, if they are connected. When a single port is clicked at the **Expert Net Control 2111**, a panel with buttons to control a single port appear:



The Port icon is green when the relay is closed, or red in the open state. An additional small clock icon indicates that a timer is active. Timer can be activated by delay, reset or batch mode.




An activated Watchdog is represented by an eye icon. An "X" means, that the address that should be observed, could not be resolved. Two circular arrows show a booting status.



The ports can be switched manually with the "On" and "Off" buttons. If the port is turned on, it can be turned off by pressing the "Reset" button, until after a delay it turns itself on again. The delay time is determined by the parameter Reset Duration, which is described in the chapter "Configuration - Output Ports<sup>29</sup>". The "Close" button dissolves the panel again.

## Batchmode

Each individual port can be set for a selectable period of time to the state "switch on" or "switch off". After the selected time they are automatically switched to the second preselected state.

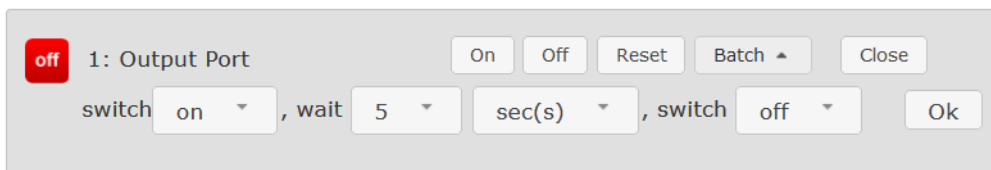

Optionally the device can be switched via a Perl script or external tools like wget. More information is available on our support wiki at [www.gude.info/wiki](http://www.gude.info/wiki).

Port	Name	null	time since transition	toggle count
Input 1	Input	● 0: off / open	00:35:24	0
Input 2	Input	● 0: off / open	00:35:24	0
Input 3	Input	● 0: off / open	00:35:24	0
Input 4	Input	● 0: off / open	00:35:24	0
Input 5	Input	● 0: off / open	00:35:24	0
Input 6	Input	● 0: off / open	00:35:24	0
Input 7	Input	● 0: off / open	00:35:24	0
Input 8	Input	● 0: off / open	00:35:24	0
Input 9	Input	● 0: off / open	00:35:24	0
Input 10	Input	● 0: off / open	00:35:24	0
Input 11	Input	● 0: off / open	00:35:24	0
Input 12	Input	● 0: off / open	00:35:24	0

The website contains a status overview of all passive signal inputs, the time since the last change, and a counter of switching changes. The name and text for a logical state of each input can be configured in the chapter Configuration-Input Ports [32](#).

Power 1	Input 1	● Off
Power 2	Input 2	● On
Power 3	PoE	● Off

This table shows which voltage inputs (Pwr1 to Pwr3) are connected to a power supply or if Power-over-Ethernet (PoE) is active.

Sensor Pwr 1	3.3V Sensor	● On
Sensor Pwr 2	12V Sensor	● Off

The indicator "3.3V sensor" shows whether the 3.3 V supply of the electronics of the external sensors works, which can be connected via RJ45. The "12V sensor" display indicates whether 12 V voltage is available at the external sensors or the passive signal inputs. The 12 V supply can be switched on in Configuration-Sensors [54](#).

## 2.3 Maintenance

---

The actual device generation with IPv6 and SSL allows all maintenance functions in the web interface to be carried out on the Maintenance Page [23](#).

### Maintenance in the web interface


The following functions are available from the maintenance web page:


- Firmware Update
- Change the SSL certificate
- Load and save the configuration
- Restart the device
- Factory Reset


- Jump into the Bootloader
- Delete the DNS cache

## Upload Firmware, Certificate or Configuration

On the Maintenance Page<sup>[23]</sup>, select the required file with "Browse .." in the sections "Firmware Update", "SSL Certificate Upload" or "Config Import File Upload" and press "Upload". The file is now transferred to the update area of the device and the contents are checked. Only now, pressing the "Apply" button will permanently update the data, or abort with "Cancel".

 Only one upload function can be initiated with a reboot, eg. you cannot transmit firmware and configuration at the same time.


 If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of Javascript with an outdated browser cache. If a Ctrl-F5 does not help, it is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

 During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page<sup>[23]</sup>).


## Actions in Bootloader mode

If the web interface of the device is no longer accessible, the device can be put into Bootloader mode (see chapter Bootloader activation<sup>[25]</sup>). The following functions can be executed using the GBL\_Conf.exe application:

- Set IPv4 address, net-mask and gateway
- Turn HTTP password on and off
- Turn IP-ACL on and off
- Factory Reset
- Allow jump from firmware to bootloader
- Restart the device

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

The GBL\_Conf.exe program is available free of charge on our website [www.gude-systems.com](http://www.gude-systems.com).

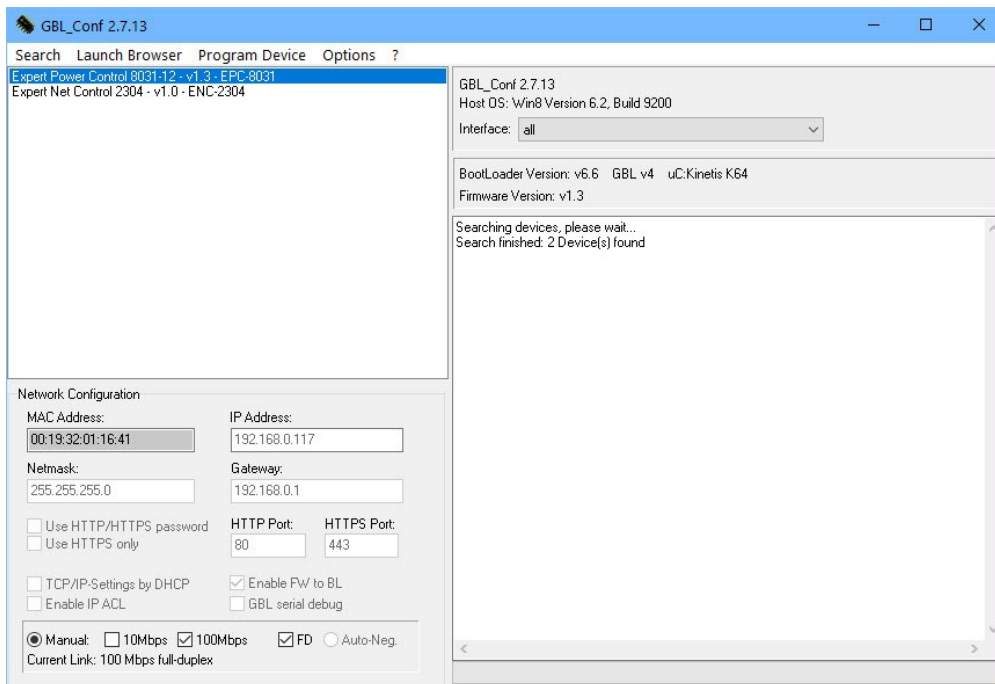


Interface GBL\_Conf

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All Devices" in the "Search" menu of GBL\_Conf.exe.

The new network configuration is now displayed.

 Changing the configuration with gbl\_conf.exe is explicitly only allowed in bootloader mode!

## Factory Reset

The device can be reset to the factory default via the web interface from the Maintenance Page<sup>[23]</sup> or from the Bootloader mode (see chapter Bootloader activation<sup>[25]</sup>). All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

## 2.3.1 Maintenance Page

This section provides access to important functions such as Firmware Update or Restart Device. It is advisable to set an HTTP password for this reason.

**Firmware Update**

**SSL Certificate Upload**

**Config Import File Upload**  
   
[Config File Export](#)

**Restart / Fab-Settings**

**Service Data**


- Config/Status View: [status.html](#)
- Config/Status Download: [export.json](#)

**Firmware Update:** Start a firmware update.


**SSL Certificate Upload:** Saves your own SSL certificate. See chapter "SSL<sup>95</sup>" for the generation of a certificate in the right format.

**Config Import File Upload:** Loads a new configuration from a text file. To apply the new configuration, a "Restart Device" must be executed after the "Upload".

**Config File Export:** Saves the current configuration in a text file.

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed).

**Restart Device:** Restarts the device without changing the status of the relays.

 Some functions such as a firmware update or changing of the IP-address and HTTP settings require a restart of the device. A jump to the boot loader or a restart of the device lead by no means to a change of the relay states.

**Restore Fab Settings and Restart Device:** Performs a restart and resets the device to factory default<sup>26</sup>.


Enter Bootloader Mode: Jumps into bootloader mode, where additional settings can be made with GBL\_Conf.exe.

Flush DNS Cache: All entries in the DNS cache are discarded and address resolutions are requested again.

Config/Status View: status.html: Displays the status.html page with the JSON data.

Config/Status Download: export.json: Direct file download of JSON data from status.html.


## 2.3.2 Configuration Management

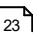The device configuration can be saved and restored in the maintenance area .

**Config Import File Upload**

[Config File Export](#)

The "Config File Export" function can be used to save the current configuration as a text file. The syntax used in the configuration file corresponds to the commands of the Telnet console. If the configuration of a device is to be restored from a text file, load the file with "Upload" and restart the device with "Restart Device".

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed). For the same reasons, it is advisable to carefully handle the generated configuration files when archiving.

### Editing the configuration file

It is possible to customize a saved configuration file with a text editor for your own needs. For example, one scenario would be to use a script language to automate the creation of many customized versions of a configuration, then equip a large number of devices with an individualized configuration. Also Upload and restart with CGI commands can be done in scripting languages. With use of the comment sign "#" you can quickly hide single commands or add personal notes.

If you modify a configuration file manually, it is not always clear which limits are allowed for parameters. After uploading and restarting, commands with invalid parameters are ignored. Therefore, the generated configuration includes comments describing the boundaries of the parameters. Where "range:" refers to a numeric value, and "len:" to a text parameter. E.g:

```
email auth set 0 #range: 0..2
email user set "" #len: 0..100
```

The command "system fabsettings" from the beginning of a generated configuration file brings the device into the factory state, and then executes the individual commands that



modify the configuration state. It may be desirable to make the changes relative to the current configuration, and not out of the factory state. Then the "system fabsettings" should be removed.

## No output of default values

The configuration file contains (with exceptions) only values which differ from the default. The command "system fabsettings" (go to the factory state) from the beginning of a generated configuration file should not be removed, otherwise the device can get incompletely configured.

## Configuration via Telnet

The configuration files can in principle also be transferred in a Telnet session, but then the settings are changed during operation, and not completely when restarting, as it would have been the case with an upload. It can happen that events are triggered at the same time as the device is configured. One should therefore:

- a) disable the function
- b) completely parametrize
- c) reactivate the function

An example:

```
email enabled set 0
email sender set "" #len: 0..100
email recipient set "" #len: 0..100
email server set "" #len: 0..100
email port set 25
email security set 0 #range: 0..2
email auth set 0 #range: 0..2
email user set "" #len: 0..100
email passwd hash set "" #len: 0..100
email enabled set 1 #range: 0..1
```

### 2.3.3 Bootloader Activation

The configuration of the device from the application "GBL\_Conf.exe" is only possible, if the device is in Bootloader Mode.

#### Activation of the Bootloader Mode

1) via push button:


- Hold both buttons for 3 seconds

2) or


- Remove the power supply
- Hold down the "Select" button. If the push button is recessed, use a pin or paper clip
- Connect the operating voltage

3) by Software:


- Start the "GBL\_Conf.exe" program
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"

 This function is only possible if "Enable FW to BL" was activated in the application "GBL\_Conf.exe" before, while the device was already in the bootloader.

4) via web interface:

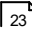Press "Enter Bootloader Mode" on the maintenance  web page.

Whether the device is in Bootloader mode, is indicated by the flashing of the status LED, or it is shown in "GBL\_Conf.exe" application after a renewed device search (appendix "BOOT-LDR" after the device name). In Bootloader mode the program "GBL\_Conf.exe" can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Abandonment of the Bootloader Mode

1) via push button:


- Hold both buttons for 3 seconds (only if the device has 2 buttons)

2) or

- Remove and connect the power supply without operating a button

3) by Software:

- Start the "GBL\_Conf.exe" application
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Factory Reset

If the device is in bootloader mode, it can always be put back to its factory default. All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

1) via push button:

- Activate the Bootloader Mode of the device

- Hold down the button (or the "Select" button for devices with 2 buttons) for 6 seconds.  
If the push button is recessed, use a pin or paper clip
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

2) by Software:

- Activate the Bootloader Mode of the device
- "Start the GBL\_Conf.exe" program
- In menu "Program Device" activate the item "Reset to Fab Settings"
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

# Configuration


## 3 Configuration

### TCP/IP configuration by DHCP

After switching on the device is scanning on the Ethernet for a DHCP server and requests an unused IP address. Check the IP address that has been assigned and adjust if necessary, that the same IP address is used at each restart. To turn off DHCP use the software GBL\_Conf.exe or use the configuration via the web interface.

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

### 3.1 Output Ports

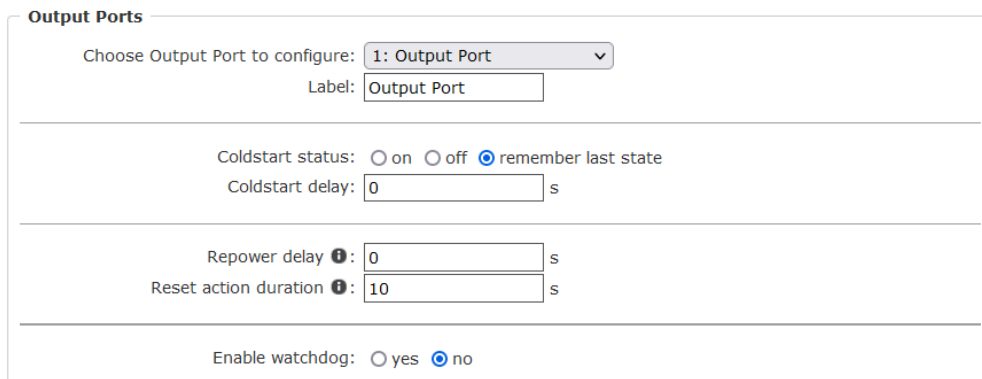

**Output Ports**

Choose Output Port to configure: 1: Output Port

Label: Output Port

Coldstart status:  on  off  remember last state

Coldstart delay: 0 s

Repower delay: 0 s

Reset action duration: 10 s

Enable watchdog:  yes  no

**Choose Output Port to configure:** This field is used to select the Output Ports to be configured.

**Label:** You can assign a name up to 15 characters for each of the Output Ports. Using the name, an identification of the the device connected to the port can be facilitated.

### Start-up Monitoring

It is important, that if necessary the condition of the Output Ports can be restored after a power failure. Therefore each port can be configured with **Initialization status** to a specific start-up state. This start-up sequence can be carried out delayed by the parameter **Initialization Delay**. There is in any case a minimum one-second delay between switching of ports.

**Coldstart status:** This is the port state (on, off, remember last state) the port should be set when the device is turned on. The setting "remember last state" saves the last manually set state of the Output Port in the EEPROM.

**Coldstart delay:** Here can be configured how long the port should wait to switch to its

defined state after the device is turned on. The delay may last up to 8191 seconds. This corresponds to a period of approx. two hours and 20 minutes. A value of zero means that the initialization is off.

Repower delay: When this feature is enabled (value greater than 0), the Output Port will switch itself on again a specified time after it has been disabled. Unlike the "Reset" button this function applies to all switch actions, including SNMP, or an optional serial interface.

Reset action duration: When the "Reset" button is triggered, the device turns the Output Port off, waits for the time entered here (in seconds) and turns the Output Port on.

Enable watchdog: Activates the watchdog function for this output port.

## 3.1.1 Watchdog

The watchdog feature enables to monitor various remote devices. Therefore either ICMP pings or TCP pings are sent to the device to be monitored. If these pings are not answered within a certain time (both the time and the number of attempts can be set), the port is reset. This allows e.g. to automatically restart not responding server or NAS systems. The mode IP master-slave port allows you to switch a port depending on the availability of a remote device.

When a watchdog is activated it presents various information in the Control Panel. The information is color-coded.

- Green text: The watchdog is active and regularly receives ping replies.
- Orange text: The watchdog is currently enabled, and waits for the first Ping response.
- Red text: The watchdog is active and receives no ping replies anymore from the configured IP address.

After the watchdog has been enabled, the display remains orange until the watchdog receives a ping response for the first time. Only then the watchdog is activated. Even after triggering a watchdog and a subsequent power port reset, the display will remain orange until the device is rebooted and responds again to ping requests. This will prevent a premature watchdog reset of the port, e.g. when a server needs a long time for a file check.

You can monitor devices on your own network, as well as devices on an external network, e.g. the operating status of a router.

Enable watchdog:  yes  no  
Ping type:  ICMP  TCP  
Hostname:   
Ping interval:  s  
Ping retries:   
Watchdog mode:  Reset port when host down:  
 Infinite wait for booting host after reset  
 Repeat reset on booting host after  ping timeouts  
 Switch off once when host down  
 IP Master-Slave port:  
 host comes up -> switch on, host goes down -> switch off  
 host goes down -> switch on, host comes up -> switch off  
 count PING requests as unreplied when ethernet link down

**Enable watchdog:** Enables the watchdog function for this Power Port.

**Watchdog type:** Here you can choose between the monitoring by ICMP pings or TCP pings.

- **ICMP Pings:** The classic ping (ICMP echo request). It can be used to check the accessibility of network devices (for example, a server).
- **TCP Pings:** With TCP pings, you can check if a TCP port on the target device would accept a TCP connect. Therefore a non-blocked TCP port should be selected. A good choice would be port 80 for http or port 25 for SMTP.

**TCP port:** Enter the TCP port to be monitored. When using ICMP pings this is not needed.

**Hostname:** The name or IP address of the monitored network device.


**Ping interval:** Select the frequency (in seconds) at which the ping packet is sent to each network device to check its operating status.

**Ping retries:** After this number of consecutive unanswered ping requests the device is considered inactive.

**Watchdog mode:** When Reset port when host down is enabled, the Power Port is turned off and switched back on after the time set in Reset Duration. In mode Switch off once when host down the Power Port remains disabled.

At the default setting (Infinite wait for booting host after reset) the watchdog monitors the connected device. When there is no longer a reply after a set time, the watchdog performs the specified action, usually a reset of the Power Port. Now the watchdog waits until the monitored device reports again on the network. This may take several minutes depending on the boot duration of the device. Only when the device is accessible from network again, the watchdog is re-armed. If the option Repeat reset on booting host after x ping timeout is enabled, this mechanism is bypassed. Now the watchdog is re-activated after N Ping intervals (input field ping timeouts).

When enabling the IP master-slave mode, the port is switched depending on the availability of a remote device. Depending on the configuration, the port is switched on when the terminal is reachable, or vice versa.

 The option Repeat reset on booting host after x ping timeout has the following pitfall: If a server, that is connected to the monitored Port is in need for a long boot process (e.g. it is doing a file system check), the server would probably exceed the tripping time of the watchdog. The server would be switched off and on again, and the file system check is restarted. This would be repeated endlessly.

count PING requests as unreplied when ethernet link down: If the Ethernet link of the device is not active, watchdog monitoring is not possible and the watchdog function is not activated. If this option is activated, a watchdog is also triggered if the Ethernet link is down.

## 3.2 Input Ports

Output Ports · [Input Ports](#)

**Configuration - Input Ports**

Input:

Input Name:

Inverted input:  yes  no

Input HI text message:

Input LOW text message:

Enable value-threshold message trigger:  yes  no

On input is HI: Switch port  to

On input is LOW: Switch port  to

Enable time-interval message trigger:  yes  no

every  second(s)

*for Console- and MQTT channels*

Enable value-delta message trigger:  yes  no

every input state change

*for Console- and MQTT channels*

Message channels:  Syslog  SNMP  Email  Console

MQTT:

Input: This field is used to select the input port to be configured.

Input Name: A name with a maximum of 15 characters can be assigned here for each of the input ports. The name can be used to facilitate identification of the device connected to the port.

Inverted Input: Inverts the assignment of the input signal to a logical HI / LOW status.

Input HI Text Message: Text display in the control panel and in messages when a HI signal is present at the input port.

Input LOW Text Message: Text display in the control panel and in messages when a LOW signal is present at the input port.

Enable value-threshold message trigger: Generates messages when the inputs change.



On input is HI: Switching action when input port changes from LOW to HI.

On input is LOW: Switching action when input port changes from HI to LOW.

Enable time interval message trigger: Generates console (Telnet/SSH) and MQTT messages within time intervals.

Enable value-delta message trigger: Generates console (Telnet/SSH) and MQTT messages when an input changes.

Message channels: Enables the generation of messages on different channels.

## 3.3 Ethernet

---

### 3.3.1 IP Address

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**Hostname**

Hostname:

**IPv4**

Use IPv4 DHCP:  yes  no

IPv4 Address:

IPv4 Netmask:

IPv4 Gateway address:

IPv4 DNS address:

MAC address: 00:19:32:01:a8:24

**IPv6**


Use IPv6 Protocol:  yes  no

Use IPv6 Router Advertisement:  yes  no

Use DHCP v6:  yes  no

Use manual IPv6 address settings:  yes  no

Hostname: Here you can enter a name with up to 63 characters. This name will be used for registration on the DHCP server.

 Special characters and umlauts can cause problems in the network.


IPv4 Address: The IP address of the device.

IPv4 Netmask: The network mask used in the network.

IPv4 Gateway address: The IP address of the gateway.

IPv4 DNS address: The IP address of the DNS server.

Use IPv4 DHCP: With "yes" the TCP/IP settings are obtained directly from the DHCP server. When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network.

 If no DHCP server is available, the last IP address is used. However, the DHCP client tries to reach a DHCP server again every 5 minutes. The DHCP request lasts one minute until it is aborted. During this time the IP-address is not accessible! It is therefore essential to deactivate DHCP for static IP addresses!

Use IPv6 Protocol: Activates IPv6 usage.

Use IPv6 Router Advertisement: The Router Advertisement communicates with the router to make global IPv6 addresses available.


Use DHCP v6: Requests from an existing DHCPv6 server addresses of the configured DNS server.

Use manual IPv6 address settings: Activates the entry of manual IPv6 addresses.

IPv6 status: Displays the IPv6 addresses over which the device can be accessed, and additionally DNS and router addresses.

**IPv6 status**

Current IPv6 status:	IPv6 Addr: fe80::219:32ff:fe00:996d 2007:7dd0:ffc1:l:219:32ff:fe00:996d
	IPv6 DNS Server: 2007:7dd0:ffc1:1:20c:29ff:feaf:93c
	IPv6 Router: fe80::20c:29ff:feaf:93c

 For IP changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

## Manual IPv6 Configuration

**IPv6 (manual)**

IPv6 Addresses:	<input type="text" value="2007:7dd0:ffc1:0:219:32ff:fe00:996d"/>	/ 64
	<input type="text"/>	/ 64
	<input type="text"/>	/ 64
	<input type="text"/>	/ 64
IPv6 DNS addresses:	<input type="text" value="2007:7dd0:ffc1:0:20c:29fffeaf:93c"/>	
	<input type="text"/>	
IPv6 Gateway address:	<input type="text" value="fe80::20c:29ff:feaf:93c"/>	

The input fields for the manual setting of IPv6 addresses allow you to configure the prefix of four additional IPv6 device addresses, and to set two DNS addresses, and a gateway.

## PHY Setting

PHY preferences can be set for 10 Mbps or 100 Mbps, half-duplex or full-duplex. Advertising means that a proposal for the connection is made, which can be rejected by the remote terminal (e.g. the switch).

**PHY Settings**

Actual Speed: 100 Mbps  
Actual Duplex Mode: Full Duplex

Change Settings (Advertising): 100 Mbps / Full Duplex ▾

### 3.3.2 IP ACL

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**ICMP Ping**

Reply ICMP ping requests:  yes  no


**IP Access Control List**


Enable IP filter:  yes  no

1. Grant IP access to host/net:	<input type="text" value="1234::4ef0:eec1:0:219:32ff:fe00:f124"/>	-	+
2. Grant IP access to host/net:	<input type="text" value="192.168.1.84"/>	-	+
3. Grant IP access to host/net:	<input type="text" value="mypc.locdom"/>	-	+
4. Grant IP access to host/net:	<input type="text" value="192.168.1.0/24"/>	-	+
5. Grant IP access to host/net:	<input type="text" value="1234:4ef0:eec1:0::/64"/>	-	+

Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

Enable IP filter: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

 Please note that when IP access control is enabled HTTP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.

 If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

## 3.3.3 HTTP

### HTTP

HTTP Server option:  HTTP + HTTPS  
 HTTP redirects to HTTPS  
 HTTPS only  HTTP only

Server port HTTP:   
Server port HTTPS:   
Supported TLS versions:

### HTTP Password

Enable password protection:  yes  no  
Use radius server passwords:  yes  no  
Use locally stored passwords:  yes  no

Set new **admin** password:  (32 characters max)  
Repeat **admin** password:

Set new **user** password:  (32 characters max)  
Repeat **user** password:

---

Session Timeout (admin):  (seconds)  
Session Timeout (user):  (seconds)  
Select Authentication Mode:


HTTP Server option: Selects whether access is possible only with HTTP, HTTPS, or both.

Server port HTTP: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

Server port HTTPS: The port number to connect the web server via the SSL (TLS) protocol.

Supported TLS versions: Limits the supported TLS versions.

Enable Ajax autorefresh: If this is activated, the information of the status page is automatically updated via http request (AJAX).


 For some HTTP configuration changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.


Enable password protection: Password access protection can be activated. If the admin


password is assigned, you can only log in by entering this password to change settings. Users can log in by entering the user password in order to query the status information and initiate switching operations.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally. In this case, an admin password and a user password must be assigned. The password can have a maximum of 31 characters. The name "admin" and "user" are provided for the user name in the password entry mask of the browser. In factory settings, the password for the admin is set to "admin" or "user" for the user password.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the SHA2-256 hash. If you want to change a password, the complete password must always be re-entered.

 If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL\_Conf.exe.



If a password is activated, the web session is automatically terminated after a timeout and you are redirected to the login page. A timeout of "0" disables the automatic logout.

Session Timeout (admin): Logout time for the admin.

Session Timeout (user): Logout time for the user.

Select Authentication Mode: Sets the session authentication mode. For details see HTTP Authentication.

## 3.4 Protocols

---

## 3.4.1 Console

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

### TCP/IP Console

Enable Telnet:  yes  no  
Telnet TCP port:   
Raw mode:  yes  no  
Active negotiation:  yes  no  
Activate echo:  yes  no  
Push messages:  yes  no  
Delay after 3 failed logins:  yes  no

---

Enable SSH:  yes  no  
SSH TCP port:   
Activate echo:  yes  no  
Push messages:  yes  no

---

Require user login (Telnet/SSH):  yes  no  
Use radius server passwords:  yes  no  
Use locally stored passwords:  yes  no  
Username:   
Set new password:  (32 characters max)  
Repeat password:   
Upload new SSH public key:

### Telnet

**Enable Telnet:** Enables the Telnet console.

**Telnet TCP port:** Telnet sessions are accepted on this port.

**Raw mode:** The VT100 editing and the IAC protocol are disabled.

**Active negotiation:** The IAC negotiation is initiated by the server.

**Activate echo:** The Telnet echo setting if not changed by IAC.

**Push messages:** Sends push messages via SSH.

**Delay after 3 failed logins:** After 3 wrong entries of username or password, the next login attempt is delayed.

### SSH

Enable SSH: Enables the SSH protocol.

SSH TCP port: Port on which SSH sessions are accepted.

Activate echo: The echo setting for SSH.

Push messages: Sends push messages via SSH.

## SSH and Telnet

Require user login: Username and password are required.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally.

Upload SSH public key: Input field for public key.

Delete public key: Setting this at Apply deletes the public key.

**Serial console**

Enable serial console:  yes  no

Raw mode:  yes  no

Activate echo:  yes  no

Enable binary KVM protocol:  yes  no

Enable UTF-8 support:  yes  no

Push messages:  yes  no

Require user login:  yes  no

Delay after 3 failed logins:  yes  no

Use radius server passwords:  yes  no

Use locally stored passwords:  yes  no

Username:

Set new password:  (32 characters max)

Repeat password:

Enable serial console: Enables the serial console.

Raw mode: The VT100 editing is disabled.

Activate echo: The echo setting.

Enable binary KVM protocol: Additionally activates the KVM protocol.

Enable UTF8 support: Enables character encoding in UTF8.

Push messages: Sends push messages via serial console.

Require user login: Username and password are required.

Delay after 3 failed logins: After 3 wrong entries of username or password, the next login attempt is delayed.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally.

## 3.4.2 Syslog

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Syslog**  
Enable Syslog:  yes  no  
Syslog server:

Enable Syslog: Enables the usage of Syslog Messages.

Syslog Server: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.

## 3.4.3 SNMP



### SNMP

Enable SNMP options:  SNMP get  SNMP set

SNMP UDP port:

sysContact:

sysName:

sysLocation:

### SNMP v2

Enable SNMP v2:  yes  no

SNMP v2 public Community:  (16 char. max)

SNMP v2 private Community:  (16 char. max)

### SNMP v3

Enable SNMP v3:  yes  no

SNMP v3 Username:  (32 char. max)

SNMP v3 Authorization Algorithm:

Set new **Authorization** password:  (8 char. min, 32 char. max)

Repeat **Authorization** password:

SNMP v3 Privacy Algorithm:

Set new **Privacy** password:  (8 char. min, 32 char. max)

Repeat **Privacy** password:

### SNMP Traps

Send SNMP Traps:

SNMP trap receiver 1 :

SNMP-get: Enables the acceptance of SNMP-GET commands.

SNMP-set: Allows the reception of SNMP-SET commands.


SNMP UDP Port: Sets the UDP port where SNMP messages are received.

sysContact: Value of RFC 1213 sysContact.

sysName: Value of RFC 1213 sysName.

sysLocation: Value of RFC 1213 sysLocation.

Enable SNMP v2: Activates SNMP v2.

 Because of security issues, it is advisable to use only SNMP v3, and to disable SNMP v2. Accesses to SNMP v2 are always insecure.

Community public: The community password for SNMP GET requests.

Community private: The community password for SNMP SET requests.

Enable SNMP v3: Activates SNMP v3.

SNMP v3 Username: The SNMP v3 User Name.

SNMP v3 Authorization Algorithm: The selected Authentication Algorithm.

SNMP v3 Privacy Algorithm: SNMP v3 Encryption Algorithm..



If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the key formed using the Authorization Algorithm. If you want to change a password, the complete password must always be re-entered.



The calculation of the password hashes varies with the selected algorithms. If the Authentication or Privacy algorithms are changed, the passwords must be re-entered in the configuration dialog. "SHA-384" and "SHA512" are calculated purely in software. If "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

Send SNMP traps: Here you can specify whether, and in what format the device should send SNMP traps.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

MIB table: The download link to the text file with the MIB table for the device.

More information about SNMP settings are available from our support or can be found on the Internet at [www.gude.info/wiki](http://www.gude.info/wiki).

## 3.4.4 Radius

**Radius**

Enable Radius Client:  yes  no

Authentication Protocol:  PAP  CHAP

Use Message Authentication:  yes  no

Default Session Timeout:

Primary Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Use backup server:  yes  no

Backup Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Enable Radius Client: Enables validation over Radius.

Use CHAP: Use CHAP password encoding.

Use Message Authentication: Adds the "Message Authentication" attribute to the Authentication Request.

Primary Server: Name or IP address of the Primary Radius server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Use Backup Server: Activates a Radius Backup server.

Backup Server: Name or IP address of the Radius Backup server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

**Test Radius Server**

Test Username:

Test Password:

Test Username: Username input field for Radius test.

Test Password: Password input field for Radius test.

The "Test Radius Server" function allows you to check whether a combination of Username and Password is accepted by the configured Radius Servers.

## 3.4.5 Modbus TCP

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Modbus TCP**

Enable Modbus TCP:  yes  no

Modbus TCP port:

Enable Modbus TCP: Enables Modbus TCP support.

Modbus TCP port: The TCP/IP port number for Modbus TCP.

## 3.4.6 MQTT

**MQTT**

Enable MQTT:  yes  no

Broker:

TLS:  yes  no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▼

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands:  yes  no

Publish device data summary interval:  s (0=disabled)

Enable MQTT: Enables MQTT support.

Broker: DNS or IP address of the MQTT broker.


TLS: Turns on TLS encryption.

Mode TCP port: The TCP/IP port number of the broker.

Username: The MQTT username.

password: The password for the username.

Client ID: The MQTT client ID.

 The client IDs of a user must be different! If two clients of a user have the same name, the connection of one client is normally terminated.

Quality of Service (QoS): Sets the QoS value (0 or 1) of the MQTT publishes.

Keep-alive ping interval: This defines the time interval in which the client sends an MQTT ping.

Topic prefix: Defines the beginning of the topic with which all messages are sent. The strings **[mac]** and **[host]** symbolize the MAC address or the hostname of the device.

Permit CLI commands: Enables the execution of console commands.

Publish device data summary interval: Time interval in which messages with the global status of the device are sent.

## MQTT Logs

- MQTT client connected
- MQTT sending client id:'client\_1641' username:'epc-user'
- MQTT broker connected
- MQTT broker DNS resolved
- MQTT broker DNS not yet resolved
- MQTT resolving host 'f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud' TCP port 8883

## MQTT Broker Status

- Broker DNS ready, connected since 71 seconds
- Last publish 11 seconds ago

MQTT Logs: Outputs individual log messages about the connection setup.

MQTT Broker Status: Time information about connection duration, the last publish and the last keep-alive.

## 3.5 Clock

---

### 3.5.1 NTP

[NTP](#) · [Timer](#)

#### NTP

Enable Time Synchronization:  yes  no

Primary NTP server:

· reply 12s ago, 59ms signal delay  
· Mon Oct 11 2021 13:49:46 GMT+0200 (Central European Summer Time)

Backup NTP server:

#### Timezone:

Timezone:

Daylight Saving Time (DST):  yes  no

#### Clock

Current Systemtime (UTC): 11:49:59 11.10.2021 (1633952999)

Current Localtime: 13:49:59 11.10.2021

Browsertime: 13:49:58 11.10.2021

Set clock:

Enable Time Synchronization: Enables the NTP protocol.

Primary NTP server: IP address of the first NTP server.

Backup NTP server: IP address of the second NTP server. Used when the first NTP server does not respond.

Timezone: The set time zone for the local time.

Daylight Saving Time: If enabled, the local time is converted to Central European Summer Time.

set manually: The user can set a time manually.

set to Browsetime: Sets the time corresponding to web browser.



If Time synchronization is enabled, a manual time will be overwritten at the next NTP synchronization.

## 3.5.2 Timer

### Timer - Basic Settings

Enable Timer:  yes  no

Syslog verbosity level:

### Timer - Rules

Enable Timer: enables or disables all timers globally.

Syslog verbosity level: Sets the verbosity level for timer syslog output.

New Rule simple Timer: Shows a dialog for a simple timer rule.

New Rule advanced Timer: Brings up the dialog for advanced timer settings.

## 3.5.3 Timer Configuration

In the timer configuration you have three options: Create a simple timer, add a complex timer, or change an existing configuration.



Timer rules are only executed if the device has a valid time. See configuration NTP <sup>46</sup>.



The number of timers is limited to 32.



This instruction chapter applies to all Gude devices. For devices without switchable ports you can only create a complex timer. For an action there is only the register "Action CLI" available, and not the register "Action PortSwitch".

**Timer - Basic Settings**

Enable Timer:  yes  no

Syslog verbosity level:

**Timer - Rules**

New Rule: simple Timer

New Rule: advanced Timer

## Creating a simple timer

If you activate "New Rule: simple Timer" the following dialog is displayed:

**Timer Rule**

Switch

From : To :

On weekdays:  Mon  Tue  Wed  Thu  Fri  Sat  Sun

You set here which port should be switched for which time period, and on which days of the week the rule is active. In this example the period 9:00 to 17:00 is changed to 9:30 to 11:00 compared to the default input mask. Also, this rule should not be applied on Saturday and Sunday. The rule we have now says that every day, except Saturday and Sunday, port 1 will be switched on at 9:30 and switched off after 1.5 hours. Clicking on "Save" saves this rule.

**Timer - Rules**

🕒 Rule 1: Port On

🕒 Rule 2: Port Off

New Rule: simple Timer

New Rule: advanced Timer

We have now created 2 rules, one for when the port is turned on and the second for when it is turned off.

## Creating a complex timer

If you create a complex timer or change an existing timer, you will always see an extended dialog. Here, ports can be switched as well as other actions can be executed via



CLI commands. The setting of the switching times is more granular.

Timer - Rule 1: Port On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Hours: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Minutes: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59


Days: 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31

Month: 01 02 03 04 05 06 07 08 09 10 11 12

Days of week: Mon Tue Wed Thu Fri Sat Sun

Delete Save Cancel

You can see here the extended representation of the first rule of the simple timer from the previous example. The action is started every day of every month at 9:30. The weekdays Saturday and Sunday are excluded. An existing rule can be removed with the "Delete" button.

 If a rule is deleted, the following rules move up. The numbering of the following rules also changes by one. This also applies to the index in the console commands.

Timer - Rule 1: Port On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name: Port On

Rule Valid from: to dd.mm.yyyy

Random Trigger Probability: 100


Random Trigger Jitter: 0 secs

enable trigger:  yes  no

Action mode:  Switch Power Ports  Perform CLI Cmd

Delete Save Cancel

The button enable trigger allows to switch a timer on and off without the need to completely delete or recreate the rule. A simple timer is directly "enabled", for a newly created complex timer "enable trigger" must be switched on manually. You can set a probability and a jitter for the timer rules. This makes random events possible. In this example the rule is executed with 100% probability. A jitter of 0 means that the action takes place exactly at the programmed time. Ports are switched as action mode, alternatively a console command (CLI Cmd) can be executed.

 After changes to existing timers, the "Rule Name" may no longer be meaningful. To keep the overview, it may be useful to adjust the name.

The switching function can be set in more detail on the "Action PortSwitch" register. Port 1 is switched on. You could extend the rule and switch more ports on or off. Additionally you can set a time for a batchmode in the field after "Between Action1 and Action 2 : wait", which starts "Action 2" after expired time. However, the batch mode has the disadvantage that it is not automatically restarted when the device is rebooted. Also, the port is locked against manual operation on the web page as long as the batch mode is running.



The "Action PortSwitch" function is only available for devices with switchable ports.


## Extending a rule


For demonstration purposes, here is an extension to the simple timer from the previous example:

The action is now started not only at 9:30, but also at 17:30 There are other changes: The timer is only active between October and December, also the action does not take place on the first day of a month.




Since all fields in the mask are always considered, it is not possible to define the times 9:30 and 17:10 in a single timer rule. You need a second rule for this. If you set the hours 9 and 17, as well as the minutes 10 and 30, then the four times 9:10, 9:30, 17:10 and 17:30 would be programmed.

 To change a field in this input mask without changing the state of the other fields, the Ctrl key must be pressed during the mouse click.

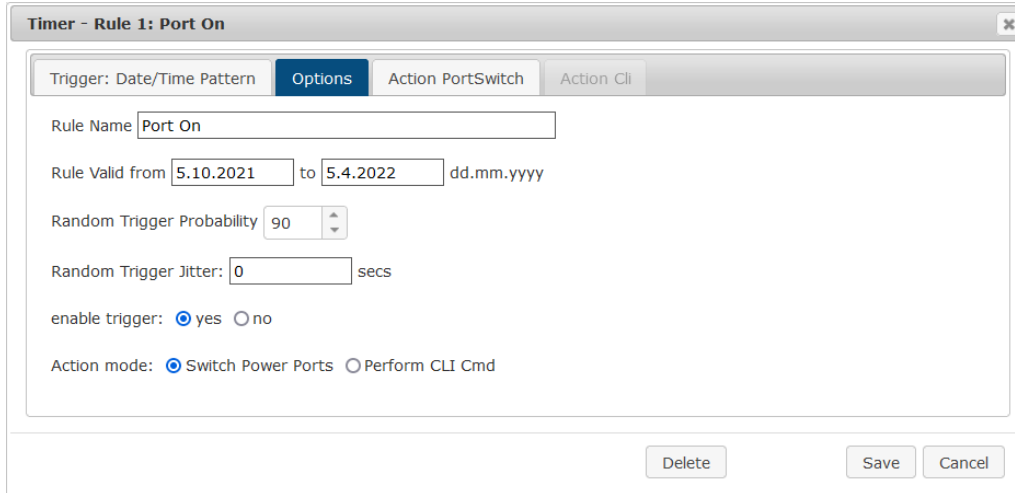


The screenshot shows the 'Timer - Rule 1: Port On' configuration window with the 'Options' tab selected. The 'Rule Name' is 'Port On'. The 'Rule Valid from' is '5.10.2021' and 'to' is '5.4.2022' in 'dd.mm.yyyy' format. 'Random Trigger Probability' is set to 90. 'Random Trigger Jitter' is 0 seconds. 'enable trigger' is set to 'yes'. 'Action mode' is 'Switch Power Ports'. Buttons for 'Delete', 'Save', and 'Cancel' are at the bottom.


For this rule, on the "Options" tab, the time period is limited to the range between 5.10.2021 and 5.4.2022. In this example, the timer rule is only executed with a probability (Random Trigger Probability) of 90%.

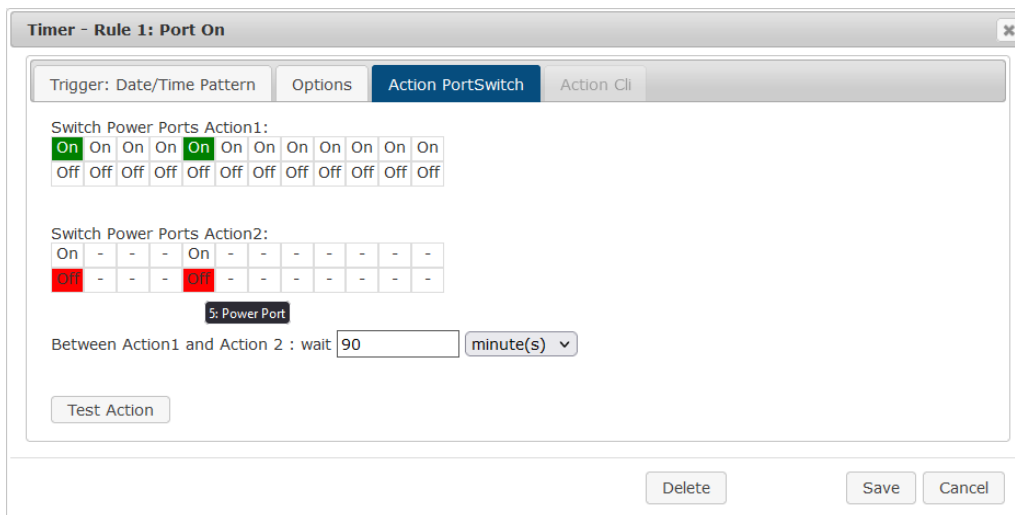

The screenshot shows the 'Timer - Rule 1: Port On' configuration window with the 'Action PortSwitch' tab selected. It displays two action tables for 'Switch Power Ports'. Action 1 shows a row of 12 'On' buttons and a row of 12 'Off' buttons. Action 2 shows a row of 12 'On' buttons and a row of 12 'Off' buttons, with the 5th 'Off' button highlighted in red. A tooltip '5: Power Port' is visible over the 5th 'Off' button. Below the tables, 'Between Action1 and Action 2 : wait' is set to 90 'minute(s)'. A 'Test Action' button is at the bottom left. 'Delete', 'Save', and 'Cancel' buttons are at the bottom right.

In this example, port 1 and port 5 are enabled and disabled after 90 minutes by batch mode.

 Action 2 is realized internally by a batch mode. This does not continue to run if a restart of the device has taken place in the meantime.

 A popup on the mouse pointer shows the port number of the field.

## Console Commands

The screenshot shows a configuration window titled "Timer - Rule 1: Port On". It has four tabs: "Trigger: Date/Time Pattern", "Options", "Action PortSwitch", and "Action Cli". The "Action Cli" tab is selected. Inside the main area, there is a text box labeled "Perform CLI Command:" containing the text "port 1 reset" and "port 3 state set 1". Below the text box is a "Test Action" button. At the bottom right of the window are "Delete", "Save", and "Cancel" buttons.

Instead of switching a port, one or more console commands can be executed. These commands are entered in the "Action CLI" register. The "Action Cli" tab can only be selected if the option "Perform CLI Cmd" is activated in "Options".

## Example Switching a Port on a Date

If you want to switch on a timer on a certain date at a certain time and switch it off at a later time, you cannot do it directly with a simple timer. Therefore it can be useful to create the timer as a simple timer first, and then customize it in the advanced dialog.

The screenshot shows a configuration window titled "Timer Rule". It has a "Switch" dropdown set to "3: Power Port" and an "On" dropdown set to "On". Below this, there are "From" and "To" time fields. "From" is set to "09:25" and "To" is set to "17:30". Underneath, there are checkboxes for "On weekdays:" with all days (Mon, Tue, Wed, Thu, Fri, Sat, Sun) checked. At the bottom right are "Save" and "Cancel" buttons.

Switch port 3 on every day at 9:25, and off again at 17:30. You save.

The screenshot shows a configuration window titled "Timer - Rule 3: Port On". It has four tabs: "Trigger: Date/Time Pattern", "Options", "Action PortSwitch", and "Action Cli". The "Options" tab is selected. Inside the main area, there is a "Rule Name" field with "Port On". Below it is a "Rule Valid from" field with "24.10.2022" and a "to" field with "24.10.2022" and "dd.mm.yyyy" label. There is a "Random Trigger Probability" field with "100" and a spinner. Below that is a "Random Trigger Jitter" field with "0" and "secs" label. There is an "enable trigger:" section with "yes" selected. At the bottom, there is an "Action mode:" section with "Switch Power Ports" selected. At the bottom right are "Delete", "Save", and "Cancel" buttons.

Then call up the two timer rules you created ("On" and "Off") and enter the date on which the switching operation is to take place in the "Options" tab.

## Example blind control

The screenshot shows a configuration window titled "Timer - Rule 3: Port On". It has four tabs: "Trigger: Date/Time Pattern", "Options", "Action PortSwitch", and "Action Cli". The "Options" tab is active. The configuration includes:

- Rule Name:
- Rule Valid from:  to  dd.mm.yyyy
- Random Trigger Probability:  (with up/down arrows)
- Random Trigger Jitter:  secs
- enable trigger:  yes  no
- Action mode:  Switch Power Ports  Perform CLI Cmd

At the bottom right, there are three buttons: "Delete", "Save", and "Cancel".

You can use the jitter e.g. for a shutter control. In the classic example of a shutter control, you do not always want to raise and lower the shutters at the same time in order to confuse potential burglars. The jitter of 1800 seconds means that the action is executed randomly in a period between 30 minutes before and 30 minutes after the programmed time. The probability (Random Trigger Probability) of execution here is 100%.

## 3.6 Sensors

### Sensors Config

Sensor: 3: 7106 - 7106 ▾  
Sensor Name: 7106  
Select Sensor Field: Temperature (°C) ▾

Enable value-threshold message trigger:  yes  no  
Maximum value: 65.0 °C  
Minimum value: 25.0 °C  
Hysteresis: 3.0 °C

When above Max value: Switch port 1: Output Port ▾ to Off ▾  
When below Max value: Switch port 1: Output Port ▾ to On ▾  
When above Min value: Switch port 2: Output Port ▾ to On ▾  
When below Min value: Switch port 2: Output Port ▾ to Off ▾

Enable time-interval message trigger:  yes  no  
every 10 second(s)  
*for Console- and MQTT channels*

Enable value-delta message trigger:  yes  no  
every value step of 5.0 °C  
*for Console- and MQTT channels*

Message channels:  Syslog  SNMP  Email  Console  
 MQTT: retained MQTT message ▾  
 Flashing display

### Misc sensor options

12V supply for external sensors on:  yes  no  
12V supply power mode:  high  low  
Min/Max measurement period: 24 Hours ▾

**Sensor:** Selects a sensor type to configure it. The first digit "1:" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the sensor name, and the adjustable sensor name.

**Sensor Name:** Changeable name for this sensor. For example, you can give the temperature and the humidity a different name, even if they belong to the same sensor.

**Select Sensor Field:** Selects a data channel from a sensor.

**Enable value-threshold message trigger:** Enables monitoring of sensor threshold values.

**Maximum/Minimum value:** Adjustable threshold values at which messages should be sent via console (Telnet/SSH), SNMP trap, Syslog, MQTT or e-mail.

**Hysteresis:** Defines the distance that must be exceeded after a limit value of an external sensor has been exceeded in order to signal that the limit value has fallen below.

**When above/below Min/Max value Switch Port:** Switches a port depending on the exceeding or falling below of a limit value.

Enable time interval message trigger: Generates console (Telnet/SSH) and MQTT messages within time intervals.

Enable value-delta message trigger: Generates console (Telnet/SSH) and MQTT messages when a sensor value deviates by a delta value.

Message channels: Enables the generation of messages on different channels.

Flashing display causes the 7-segment display to flash. Pressing a front panel button resets the beeper and the flashing display.

12V supply for external sensors on: Enables the 12V power supply for external sensors and input ports.

12V supply power mode: Switches the power of the 12V supply (high = 600 mA, low = 400 mA).

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

## Hysteresis Example:

A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set.

Example:

49.9 °C - is below the upper limit  
50.0 °C - a message is generated for reaching the upper limit  
50.1 °C - is above the upper limit

...

49.1 °C - is below the upper limit, but in the hysteresis range  
49.0 °C - is below the upper limit, but in the hysteresis range  
48.9 °C - a message is generated for underrunning the upper limit inclusive hysteresis range


...

### 3.6.1 Port Switching

Depending on the measured Current and the measured sensor values, switching actions can be triggered. During operation, the actions configured for crossing the limits are executed. For example, when a value moves from the range "above max value" inside the range "below max value", the action defined for "below max value" is performed. In the case of device start, configuration or plug-in of the sensor, the actions corresponding to the range in which the current temperature is located are switched.

Example with "Maximum value" of 65 °C, "Minimum value" of 25 °C and hysteresis of 3 °C. The dotted line shows the hysteresis.

# Configuration

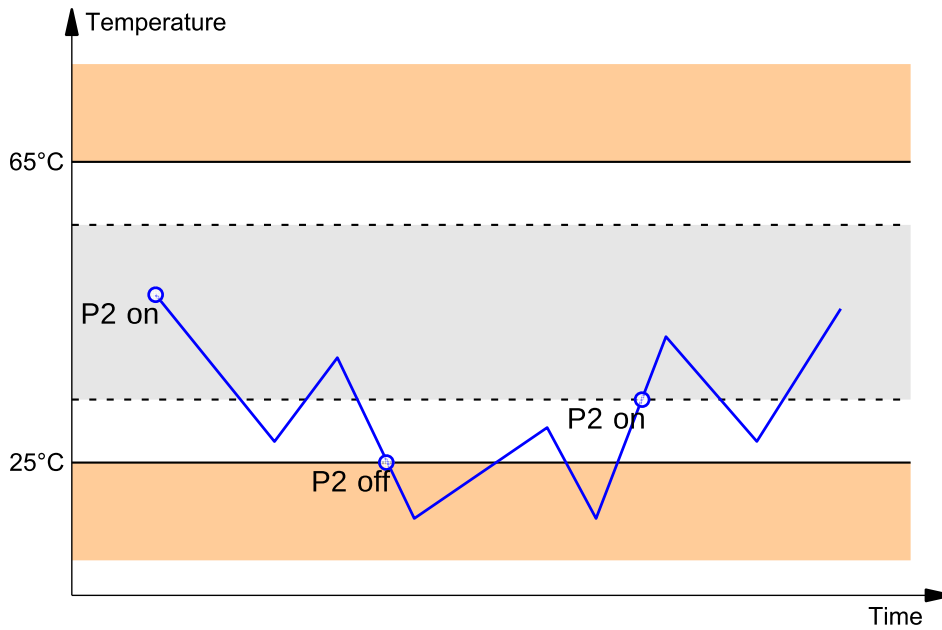


- When above Max value: Switch port  to
- When below Max value: Switch port  to
- When above Min value: Switch port  to
- When below Min value: Switch port  to

Actions during configuration, device start or plugging in the sensor (for given example):

actual temperature during configuration	actions
70 °C	Port 1 Off (above max) + Port 2 On (above min)
45 °C	Port 1 On (below max) + Port 2 On (above min)
20 °C	Port 1 On (below max) + Port 2 Off (below min)

Action matrix during operation when limit values are exceeded (for given example):

	to "above max"	to "below max"	to "above min"	to "below min"
from "above max"	-	P1 On	P1 On	P1 On + P2 Off
from "below max"	P1 Off	-	-	P2 Off
from "above min"	P1 Off	-	-	P2 Off
from "below min"	P1 Off + P2 On	P2 On	P2 On	-

 Only the switching operations for which actions have been defined, are triggered. If no "On" or "Off" action is defined for a port, the port can never reach this state by exceeding sensor values. Unless it is the initial state.

## 3.7 E-Mail



**E-Mail**  
Enable E-Mail:  yes  no  
Sender address:   
Recipient address:   
SMTP server:   
SMTP server port:  (Default: 587)  
SMTP Connection Security:  ▾

**Authentication**  
SMTP Authentication (password):  ▾  
Username:   
Set new password:   
Repeat password:

**Enable E-Mail:** Activates the E-Mail dispatch of messages.

**Sender address:** The E-Mail address of the sender.

**Recipient address:** The E-Mail address of the recipient. Additional E-Mail addresses, separated by comma, can be specified. The input limit is 100 characters.

**SMTP Server:** The SMTP IP-address of the E-Mail server. Either as FQDN, e.g: "mail.gmx.net", or as IP-address, e.g: "213.165.64.20". If required, attach a designated port, e.g: "mail.gmx.net:25".

**SMTP server port:** The port address of the E-Mail server. In the normal case this should be the same as the default, that is determined by the setting **SMTP Connection Security**.


**SMTP Connection Security:** Transmission via SSL or no encryption.

**SMTP Authentication (password):** Authentication method of the E-Mail Server.

**Username:** User name that is registered with the SMTP E-Mail server.

**Set new password:** Enter the password for the login to the E-Mail server.

**Repeat password:** Enter the password again to confirm it.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the password is never shown itself. If you want to change a password, the complete password must always be re-entered.

**E-Mail Logs:** Logging of E-Mail system messages.

## 3.8 Front Panel

---

**Front Panel**

Button Lock:  yes  no

Allow switching all ports:  yes  no

Display 1 default:  ▼

Button Lock: Disables the front buttons (activates the key lock) with the exception of the bootloader activation.

Allow switching all ports: Allows to switch all ports on or off with the front panel buttons.

Display 1 default: Selects what sensor is displayed in the display.


# Specifications

## 4 Specifications




### 4.1 Automated Access

---

The device can be accessed automatically via four different interfaces, which offer different possibilities to access the configuration data and status information. Only http and the console (telnet and serial) provide full access to the device.

 This chapter is general for all Gude devices. Depending on the device model are ports, certain sensors or other features not available.

List of different access options:

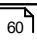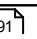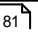Interface	Scope of Access
HTTP	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
Console 	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
SNMP 	read / write status of Power Ports (relays or eFuses) read / write names of Power Ports (relays or eFuses) read / write status of Port start configuration read / write status Buzzer read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read NTP time and status resetting the energy meters read the status of Overvoltage Protection
Modbus TCP 	read / write status of Power Ports (relays or eFuses) read status of Inputs read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read the status of Overvoltage Protection
MQTT	Execute console commands

The device can be controlled via HTTP interface with CGI commands and returns the internal configuration and status in JSON format. The structure of the CGI commands and the JSON data is explained in more detail in our Wiki article:  
[http://wiki.gude.info/EPC\\_HTTP\\_Interface](http://wiki.gude.info/EPC_HTTP_Interface)

### 4.2 Console


---

For the configuration and control of the device, there is a set of commands with paramet-

ers that can be entered through a console. The console is available via SSH or Telnet, or for devices with RS232 port through using a serial terminal. It is not necessary to use Telnet, in **Raw Mode** a simple TCP/IP connection is sufficient to send commands. The communication can also be performed automated (e.g. via scripting languages). The console features are configured through the web interface<sup>[38]</sup>.

## Login

A ssh / telnet log in can be configured with password or without:

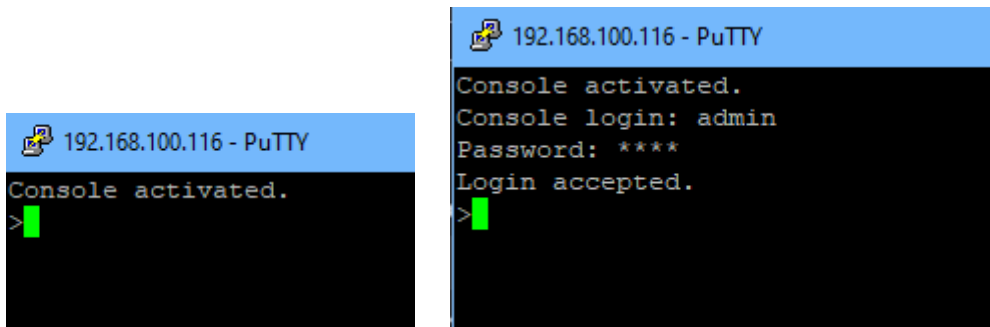

## Command Set

There are several command levels. The following commands are usable from each level:

back	go back one level
help	all commands of the actual level
help all	show all commands
logout	logout (only when login required)
quit	quit console

The "help" command returns all the commands of the current level. If "help" is called from the top level, e.g. the line "http [subtopics]" appears. This means that there is another level for "http". With the command "http help" all commands below "http" are shown. Alternatively, with entering "http" you can select the http level, and "help" shows all the commands on the selected level. The command "back" again selects the top level. It is possible to use "help" at any position: "http passwd help" provides all commands that have the prefix "http passwd".

You will find a complete list of all possible device commands in the chapter "Cmd Overview".

## Parameter

If parameters are expected for the command, the parameter may be passed as numeric or constant. If e.g. you get the following line as help:

```
http server set {http_both=0|https_only=1|http_only=2}
```

the following instruction pairs are equivalent:

# Specifications

```
http server set https_only
http server set 1
```

or

```
http server set https_both
http server set 0
```

Numerical parameters can be entered with different bases. Here is an example of the decimal value 11:

Base	Input
decimal (10)	11
hexadecimal (16)	0xb
octal (8)	013
binary (2)	0b1011

## Bit Field Parameter

Some parameters can take several values at the same time. In the following example, all values between 0 and 5 can be set. In the help, this can be recognized by the fact that the values are not separated by the "|" character, but by commas.

```
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"
```

To set EVT\_SYSLOG and EVT\_EMAIL in a command, you can use the following syntax:

```
>extsensor 1 2 0 events type set "EVT_SYSLOG,EVT_EMAIL"
OK.
```

or numeric

```
>extsensor 1 2 0 events type set "0,2"
OK.
```

Additionally you can set all values with "ALLSET" or encode any bit pattern as hexadecimal with a syntax like "#7f1a".

## Return Values

If a command is unknown or a parameter is incorrect, the output "ERR." is given at the beginning of the line, followed by a description of the fault. Successful instructions without special return value will be acknowledged by "OK.". All other return values are output within a single line. There are of two exceptions:

1. Some configuration changes, that affect TCP / IP and UDP, need a restart to be applied. These parameters are output on two lines. In the first line the current value is shown, on the second row the value after a restart. In the "Cmd Overview" table this is marked with "Note 2".
2. Other configurations (such as the assigned IPv6 addresses) have several values that can change dynamically. This is marked with "Note 3" in the "Cmd Overview" table.

## Numerical Returns

For parameters that support constants, these constants are output as return values. To better deal with scripting languages, it may be easier to work only with numerical returns. The command `"vt100 numeric set ON"` enables that only numerical values appear.

## Comments


If you use a tool to send an entire file of commands via Telnet, it is helpful, if you can place comments in there. Beginning with the comment character "#", the remaining contents of a line is ignored.

## Telnet

If the configuration "Raw Mode" is turned off, it is tried to negotiate the Telnet configuration between client and server using IAC commands. If this fails, the editing functions are not active, and the "Activate echo" option determines whether the characters sent to the Telnet server will be returned. Normally the client begins with the IAC negotiation. If this is not the case with the client, the device configuration "Active negotiation" should be turned on.

## Raw Mode

If you want to use the console only automated, it may be advantageous to set the configuration "Raw mode" to "yes" and "Activate echo" to "no" to. Then there is no interfering interaction with the editor functions and there is no need to filter the sent characters to process the return values.

 If in the console "Raw mode" is activated but not in the used Telnet client, the IAC commands sent at the beginning can appear as interfering characters in the command line (partially invisible).

## Editing

The following edit functions are available when the terminal supports VT100, and Raw Mode is deactivated. Entered characters are inserted at the cursor position.

Keys	Function
Left, Right	moves cursor left or right
Pos1, End	moves cursor to the beginning or end of line
Del	deletes character under the cursor
Backspace	deletes character left of cursor
Up, Down	shows input lines history
Tab, Ctrl-Tab	completes the word at cursor
Ctrl-C	clears the line

 This chapter is general for all Gude devices. Depending on the device type, ports or

certain sensors may not be available.

## Sensor Examples

### a) External Sensors


```
>extsensor all show
E=1,L="7106",0="21.3°C",1="35.1%",3="1013hPa",4="5.2°C",5="16.0°C"
E=2,L="7102",0="21.2°C",1="35.4%",4="5.3°C",5="15.9°C"
```

The command lists one connected external sensor per line, and the individual measured values are separated by commas after the label name. The digit before the equal sign corresponds to the Index field in the External Sensor Table.

```
>extsensor 1 0 value show
```

Displays temperature of the sensor at Port 1

### b) Line Sensors


 For devices with 230V input metering (Metered PDU).

```
>linesensor all "0,1,2,3,12" show
L=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
L=2,L="Power Port",0="13000Wh",1="0W",2="223V",3="0A",12="996199s"
```


This command outputs all line sensor values in one line. A list of all fields (according to the energy sensor table) is transferred as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>linesensor 1 "0,1,2,3,12" show
>linesensor 1 1 show
```

These variants give the sensor values of the field list or of a sensor at Line-In 1.

 For devices with Overvoltage Protection, the "linesensor all" command also outputs the state of the protection ("OVP=x"). A "1" means ok, a "0" a failure of the protection.

### c) Port Sensors

 For devices with 230V output metering (Outlet-Metered PDU).

```
>portsensor all "0,1,2,3,12" show
P=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
P=2,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="996199s"
...
P=12,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

This command outputs all port sensor values in one line. A list of all fields (according to the energy sensor table) is passed as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).



```
>portsensor 2 "0,1,2,3,12" show
>portsensor 2 1 show
```

These variants give the sensor values of the field list or a sensor to at Outlet Port 2.



The following examples refer to Gude devices that have switchable ports.

#### d) Displaying Port Relays

```
>port all state 1 show
P1=ON, P2=OFF, P3=ON, P4=OFF, P5=OFF, P6=OFF, P7=OFF, P8=ON
```

The command "port all state {MODE0=0|MODE1=1|MODE2=2} show" returns the switching state of all relays in 3 possible formats.

#### e) Switching Port Relays

```
#port all state set "1,2,12" 1
OK.
```

The command syntax "port all state set "{port\_list}" {OFF=0|ON=1}" sets a list of ports to ON=1 or OFF=0.

## 4.2.1 SSH

The device supports SSH-2 connections with either public key authentication or user name and password. The "login" must be enabled for SSH. Users and passwords can be stored locally or retrieved via a radius server. If you want to use SSH in a terminal, [Activate echo](#) should be enabled.

### Public Keys

The following public keys are accepted:

Key type	Length
RSA	2048, 4096
ECDSA	256, 384

### Generation with PuTTYgen

# Specifications

Key

Public key for pasting into OpenSSH authorized\_keys file:

```
ssh-rsa AAAAB3NzaC1yc2EAAAABJQAAAQEAKA926b1dwfApsq1ra3Hzw
+L5mdXuqglDgQ1Db7Klm16mqmzGoVBX6kmVWmx2XRucTUQohrVzvqAUj
+38VtDLcTIXbtZS7i7WrqDdougl28k5Jx7JORpMuNGBLOsdPK5KNeYm9SPo8wltN0
pc04U3r9unNjqTar2cXqui4XHdvvFr0dByaaeR3yBWjivdv46uuXaia2T4p6Ou4Pkys0/b
/AnBVSw2SeRNIVoEAUx8eXrIRkvhvXZtzGaxK2xDE3l9Ziz//xt79o6V7yih00ROuf1bit
```

Key fingerprint:

Key comment:

Key passphrase:

Confirm passphrase:

Actions

Generate a public/private key pair

Load an existing private key file

Save the generated key

Generated keys can be copied directly from e.g. PuTTYgen,

Upload new SSH public key: 

```
ssh-rsa
AAAAB3NzaC1yc2EAAA
ADAQABAAABAQDTliqb/
```

Delete public key

and inserted into the Configuration - Console input field. Public keys are accepted in SSH2 or OpenSSH format.

## Generation with ssh-keygen

The tool ssh-keygen is mostly shipped with Linux and Windows to generate SSH keys. Here is an example to generate an ECDSA 384 key.

```
ssh-keygen -t ecdsa -b 384 -f ssh.key
```

In the file ssh.pub is then the private key, the content of ssh.key.pub is inserted into the field "Upload SSH public key:".

Upload new SSH public key: 

```
ecdsa-sha2-nistp384
AAAAE2VjZHNhLXNoYTl
tbmlzdHAzODQAAAAIbm
```

Delete public key

### 4.2.2 Console Cmd 2111

Command	Description	Note
---------	-------------	------

# Specifications

logout	go to login prompt w hen enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	show s if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	show s timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show	show s if dst is enabled	
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually	
clock show	show s actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns_name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	show s ntp server name	
console	enters cmd group "console"	
console version	show s unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	show s if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	show s telnet port	
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	
console telnet raw show	show s if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show	show s if echo enabled	
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off	
console telnet activeneg show	show s if active negotiation enabled	
console telnet login set {OFF=0 ON=1}	enables login on/off	
console telnet login show	show s if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	show s if local login enabled	
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
console telnet login radius show	show s if RADIUS login enabled	
console telnet login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off	
console telnet login delay show	show s if login delay enabled	
console telnet pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console telnet pushmsgs config show	show s if persistent push msgs are enabled	
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console telnet pushmsgs show	show s if temporary push msgs are enabled	
console telnet user set "{username}"	sets login user name	
console telnet user show	show s login user name	
console telnet passw d set "{passw d}"	sets login passw ord	
console telnet passw d hash set "{passw d}"	sets login hashed passw ord	
console ssh enabled set {OFF=0 ON=1}	enables SSH	
console ssh enabled show	show s if SSH enabled	
console ssh port set {ip_port}	sets SSH port	
console ssh port show	show s SSH port	
console ssh echo set {OFF=0 ON=1}	enables echo on/off	
console ssh echo show	show s if echo enabled	
console ssh pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console ssh pushmsgs config show	show s if persistent push msgs are enabled	
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console ssh pushmsgs show	show s if temporary push msgs are enabled	
console ssh public hash set "{passw d}"	sets hash of SSH public key	
console ssh public hash show	show s hash of SSH public key	
console serial enabled set {OFF=0 ON=1}	enables serial console on/off	
console serial enabled show	show s if serial console enabled	
console serial raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	
console serial raw show	show s if raw mode enabled	
console serial echo set {OFF=0 ON=1}	enables echo on/off	

# Specifications

console serial echo show	show s if echo enabled	
console serial kvm set {OFF=0 ON=1}	enables binary KVM cmds on serial port on/off	
console serial kvm show	show s if binary KVM cmds enabled	
console serial utf8 set {OFF=0 ON=1}	enables UTF8 support	
console serial utf8 show	show s if UTF8 enabled	
console serial login set {OFF=0 ON=1}	enables login on/off	
console serial login show	show s if login enabled	
console serial login local set {OFF=0 ON=1}	enables local login on/off	
console serial login local show	show s if local login enabled	
console serial login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
console serial login radius show	show s if RADIUS login enabled	
console serial login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off	
console serial login delay show	show s if login delay enabled	
console serial pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console serial pushmsgs config show	show s if persistent push msgs are enabled	
console serial pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console serial pushmsgs show	show s if temporary push msgs are enabled	
console serial user set "{username}"	sets login user name	
console serial user show	show s login user name	
console serial passw d set "{passw d}"	sets login passw ord	
console serial passw d hash set "{passw d}"	sets login hashed passw ord	
email	enters cmd group "email"	
email enabled set {OFF=0 ON=1}	enables email on/off	
email enabled show	show s if email is enabled	
email sender set "{email_addr}"	sets email sender address	
email sender show	show s email sender address	
email recipient set "{email_addr}"	sets email recipient address	
email recipient show	show s email recipient address	
email server set "{dns_name}"	sets email SMTP server address	
email server show	show s email SMTP server address	
email port set {ip_port}	sets email SMTP port	
email port show	show s email SMTP port	
email security set {NONE=0 STARTTLS=1 SSL=2}	sets SMTP connection security	
email security show	show s SMTP connection security	
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication	
email auth show	show email authentication	
email user set "{username}"	sets SMTP username	
email user show	show s SMTP username	
email passw d set "{passw d}"	sets SMTP passw ord	
email passw d hash set "{passw d}"	sets crypted SMTP passw ord	
email testmail	send test email	
ethernet	enters cmd group "ethernet"	
ethernet mac show	show s MAC address	
ethernet link show	show s ethernet link state	
ethernet phyprefer set {10MBIT_HD=0 10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3}	sets preferred speed for PHY Auto Negotiation	
ethernet phyprefer show	show s preferred speed for PHY Auto Negotiation	
ethernet poe show	show s if Pow er-over-Ethernet is activated	
extinput	enters cmd group "extinput"	
extinput {port_num} {inp_num} state show	show s input state	
extinput all state {MODE0=0 MODE1=1 MODE2=2} show	show s input state of all ports in 3 different view modes	4
extinput {port_num} {inp_num} name set "{name}"	sets sensor name to label	
extinput {port_num} {inp_num} name show	show s label of sensor	
extinput {port_num} {inp_num} invert enabled set {OFF=0 ON=1}	inverts input on/off	
extinput {port_num} {inp_num} invert enabled show	show s if input inverted	
extinput {port_num} {inp_num} label {LOW=0 HIGH=1} set "{name}"	sets input low /high text	
extinput {port_num} {inp_num} label {LOW=0 HIGH=1} show	show s input low /high text	

# Specifications

extinput {port_num} {inp_num} events set {OFF=0 ON=1}	enables input events on/off	
extinput {port_num} {inp_num} events show	show s if input events are enabled	
extinput {port_num} {inp_num} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}"	enables different event types	
extinput {port_num} {inp_num} events type show	show s what event types are enabled	
extinput {port_num} {inp_num} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
extinput {port_num} {inp_num} publish mode show	show s publish mode	
extinput {port_num} {inp_num} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
extinput {port_num} {inp_num} publish mqtt retain show	show s if mqtt retain set	
extinput {port_num} {inp_num} publish timer set {num_secs}	sets publish time interval	
extinput {port_num} {inp_num} publish timer show	show s publish time interval	
extinput {port_num} {inp_num} {LOW=0 HIGH=1} port set {port_num}	sets Port for Pow er Port Sw itching actions	
extinput {port_num} {inp_num} {LOW=0 HIGH=1} port show	show s Port for Pow er Port Sw itching actions	
extinput {port_num} {inp_num} {LOW=0 HIGH=1} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Pow er Port Sw itching actions	
extinput {port_num} {inp_num} {LOW=0 HIGH=1} state show	show s Port state for Pow er Port Sw itching actions	
extsensor	enters cmd group "extsensor"	
extsensor all show	show s all values from connected external sensors	
extsensor all show	show s all plugged sensors and fields	
extsensor {port_num} {sen_field} value show	show s sensor value	6
extsensor {port_num} {sen_type} label set "{name}"	sets sensor name to label	6
extsensor {port_num} {sen_type} label show	show s label of sensor	6
extsensor {port_num} type show	show s type of sensor	
extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1}	enables sensor events on/off	6
extsensor {port_num} {sen_type} {sen_field} events show	show s if sensor events are enabled	6
extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}"	enables different event types	6
extsensor {port_num} {sen_type} {sen_field} events type show	show s what event types are enabled	6
extsensor {port_num} {sen_type} {sen_field} maxval set {num}	sets maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} maxval show	show s maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval set {num}	sets minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval show	show s minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst set {num}	sets hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst show	show s hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
extsensor {port_num} {sen_type} {sen_field} publish mode show	show s publish mode	

# Specifications

extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show	show s if mqtt retain set	
extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs}	sets publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish timer show	show s publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish delta set {float}	sets publish delta value	
extsensor {port_num} {sen_type} {sen_field} publish delta show	show s publish delta value	
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port show	show s Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state set {OFF=0 ON=1  DISABLED=2}	sets Port state for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state show	show s Port state for Power Port Switching actions	6
extsensor period set {24H=0 12H=1 2H=2 1H=3  30MIN=4}	sets sensor Min/Max measurement period	
extsensor period show	show s sensor Min/Max measurement period	
extsensor {port_num} {sen_field} calib set {float}	sets calibration offset for temperature or humidity	
extsensor {port_num} {sen_field} calib show	show s calibration offset for temperature or humidity	
http	enters cmd group "http"	
http server set {HTTP_BOTH=0 HTTPS_ONLY=1  HTTP_ONLY=2 HTTPS_REDIR=3}	sets accepted connection types	
http server show	show s accepted connection types	
http port set {ip_port}	sets http port	
http port show	show s http port	
http portssl set {ip_port}	sets https port	
http portssl show	show s https port	
http tls mode set {TLS12=0 TLS13_12=1 TLS13=2  TLS13_12_11=3}	restricts TLS mode	
http tls mode show	show s TLS mode restriction	
http auth mode set {BASIC=0 SESSION=1  SESSION_EXT=2}	sets http session authentication mode	
http auth mode show	show s http session authentication mode and compatibility	
http passwd enabled set {OFF=0 ON=1}	enables http passwd on/off	
http timeout admin set {num_secs}	sets admin session timeout	
http timeout admin show	show s admin session timeout	
http timeout user set {num_secs}	sets user session timeout	
http timeout user show	show s user session timeout	
http passwd enabled show	show s if http passwd enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	show s if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show	show s if RADIUS login enabled	
http passwd user set "{passwd}"	sets http user passwd	
http passwd admin set "{passwd}"	sets http admin passwd	
http passwd hash user set "{passwd}"	sets hashed http user passwd	
http passwd hash admin set "{passwd}"	sets hashed http admin passwd	
input	enters cmd group "input"	
input {port_num} state show	show s input state	
input all state {MODE0=0 MODE1=1 MODE2=2} show	show s input state of all ports in 3 different view modes	4

# Specifications

input {port_num} name set "{name}"	sets sensor name to label	
input {port_num} name show	show s label of sensor	
input {port_num} invert enabled set {off=0 on=1}	inverts input on/off	
input {port_num} invert enabled show	show s if input inverted	
input {port_num} label {LOW=0 HIGH=1} set "{name}"	sets input low /high text	
input {port_num} label {LOW=0 HIGH=1} show	show s inputs low /high text	
input {port_num} events set {off=0 on=1}	enables input events on/off	
input {port_num} events show	show s if input events are enabled	
input {port_num} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7}"	enables different event types	
input {port_num} events type show	show s w hat event types are enabled	
input {port_num} {inp_num} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
input {port_num} {inp_num} publish mode show	show s publish mode	
input {port_num} {inp_num} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
input {port_num} {inp_num} publish mqtt retain show	show s if mqtt retain set	
input {port_num} {inp_num} publish timer set {num_secs}	sets publish time interval	
input {port_num} {inp_num} publish timer show	show s publish time interval	
input {port_num} {LOW=0 HIGH=1} port set {port_num}	sets Port for Pow er Port Sw itching actions	
input {port_num} {LOW=0 HIGH=1} port show	show s Port for Pow er Port Sw itching actions	
input {port_num} {LOW=0 HIGH=1} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Pow er Port Sw itching actions	
input {port_num} {LOW=0 HIGH=1} state show	show s Port state for Pow er Port Sw itching actions	
input volt3 state show	show s state of 3V input voltage {ON=1 VERR=3}	
input volt12 state set {OFF=0 VLO=1 VHI=2}	sets state of 12V input voltage	
input volt12 state show	show s state of 12V input voltage {OFF=0 VLO=1 VHI=2 VERR=3} incl possible error condition	
ip4		
ip4 hostname set "{name}"	sets device hostname	
ip4 hostname show	show s device hostname	3
ip4 address set "{ip_address}"	sets IPv4 address	
ip4 address show	show s IPv4 address	3
ip4 netmask set "{ip_address}"	sets IPv4 netmask	
ip4 netmask show	show s IPv4 netmask	3
ip4 gatew ay set "{ip_address}"	sets IPv4 gatew ay address	
ip4 gatew ay show	show s IPv4 gatew ay address	3
ip4 dns set "{ip_address}"	sets IPv4 DNS server address	
ip4 dns show	show s IPv4 DNS server address	3
ip4 dhcp enabled set {OFF=0 ON=1}	enables IPv4 DHCP on/off	
ip4 dhcp enabled show	show s IPv4 DHCP state	3
ip6		
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	show s if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1}	enables IPv6 router advertisement	
ip6 routadv enabled show	show s IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1}	enables IPv6 DHCP on/off	
ip6 dhcp enabled show	show s if IPv6 DHCP is enabled	3
ip6 address show	show all IPv6 addresses	4
ip6 gatew ay show	show all IPv6 gatew ays	4
ip6 dns show	show all IPv6 DNS server	4
ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	
ip6 manual enabled show	show s if manual IPv6 addresses are enabled	3
ip6 manual address {1..4} set "{ip_address}"	sets manual IPv6 address	
ip6 manual address {1..4} show	show s manual IPv6 address	3

# Specifications

ip6 manual gateway set "{ip_address}"	sets manual IPv6 gateway address	
ip6 manual gateway show	shows manual IPv6 gateway address	3
ip6 manual dns {1..2} set "{ip_address}"	sets manual IPv6 DNS server address	
ip6 manual dns {1..2} show	shows manual IPv6 DNS server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter {ipacl_num} set "{dns_name}"	sets IP filter {ipacl_num}	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
modbus	enters cmd group "modbus"	
modbus enabled set <off=0/on=1>	enables Modbus TCP support	
modbus enabled show	shows if Modbus is enabled	
modbus port set <ip_port>	sets Modbus TCP port	
modbus port show	shows Modbus TCP port	
mqtt	enters cmd group "mqtt"	
mqtt {broker_idx} enabled set {OFF=0 ON=1}	enable mqtt	
mqtt {broker_idx} enabled show	shows if mqtt enabled	
mqtt {broker_idx} server set "{dns_name}"	sets broker name	
mqtt {broker_idx} server show	shows broker name	
mqtt {broker_idx} tls enabled set {OFF=0 ON=1}	enable TLS	
mqtt {broker_idx} tls enabled show	shows if TLS enabled	
mqtt {broker_idx} port set {ip_port}	set broker TCP/IP port	
mqtt {broker_idx} port show	shows broker TCP/IP port	
mqtt {broker_idx} user set "{username}"	sets username	
mqtt {broker_idx} user show	shows username	
mqtt {broker_idx} password set "{password}"	sets password	
mqtt {broker_idx} password hash set "{password}"	sets hashed password	
mqtt {broker_idx} client set "{name}"	sets client name	
mqtt {broker_idx} client show	shows client name	
mqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level	
mqtt {broker_idx} qos show	shows QoS level	
mqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time	
mqtt {broker_idx} keepalive show	shows keep-alive time	
mqtt {broker_idx} topic set "{name}"	sets topic prefix	
mqtt {broker_idx} topic show	shows topic prefix	
mqtt {broker_idx} console enabled set {OFF=0 ON=1}	permit console cmds	
mqtt {broker_idx} console enabled show	shows if console cmds allowed	
mqtt {broker_idx} device data timer set {num_secs}	sets telemetry interval	
mqtt {broker_idx} device data timer show	shows telemetry interval	
port	enters cmd group "port"	
port {port_num} state set {OFF=0 ON=1}	sets port to new state	
port {port_num} state show	shows port state	
port all state set "{port_list}" {OFF=0 ON=1}	sets several ports in one cmd - e.g. port all state set "1,3,5" 1	
port all state {MODE0=0 MODE1=1 MODE2=2} show	shows all port states in 3 different view modes	4
port all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	switch all ports on/off forward or reverse	
port restart all set {REINIT=0 OFF_REV_REINIT=1,OFF_REINIT=2}	reinit coldstart sequence (optional first all off)	
port {port_num} reset	start reset sequence for port	
port {port_num} toggle	toggles port	
port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1}	starts batch mode for port	
port {port_num} batch cancel	Cancels batch mode	
port {port_num} label set "{name}"	sets port label name	
port {port_num} label show	shows port label name	
port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2}	sets port coldstart initialization	



# Specifications

port {port_num} initState coldstart show	show s port coldstart initialization
port {port_num} initState delay set {num}	sets port init delay
port {port_num} initState delay show	show s port init delay
port {port_num} repow erdelay set {num}	sets port repow er delay
port {port_num} repow erdelay show	show s port repow er delay
port {port_num} resettime set {num}	sets port reset duration
port {port_num} resettime show	show s port reset duration
port {port_num} w atchdog enabled set {OFF=0 ON=1}	sets port w atchdog to on/off
port {port_num} w atchdog enabled show	show s port w atchdog state
port {port_num} w atchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3}	sets port w atchdog mode
port {port_num} w atchdog mode show	show s port w atchdog mode
port {port_num} w atchdog type set {WD_ICMP=0 WD_TCP=1}	sets port w atchdog type
port {port_num} w atchdog type show	show s port w atchdog type
port {port_num} w atchdog link dow n set {OFF=0 ON=1}	sets if w atchdog active w hen eth link dow n
port {port_num} w atchdog link dow n show	show s if w atchdog active w hen eth link dow n
port {port_num} w atchdog host set "{dns_name}"	sets port w atchdog host target
port {port_num} w atchdog host show	show s port w atchdog host target
port {port_num} w atchdog port set {ip_port}	sets port w atchdog TCP port
port {port_num} w atchdog port show	show s port w atchdog TCP port
port {port_num} w atchdog pinginterval set {num}	sets port w atchdog ping interval
port {port_num} w atchdog pinginterval show	show s port w atchdog ping interval
port {port_num} w atchdog pingretries set {num}	sets port w atchdog ping retries
port {port_num} w atchdog pingretries show	show s port w atchdog ping retries
port {port_num} w atchdog retrybooting set {OFF=0 ON=1}	sets port w atchdog retry booting to on/off
port {port_num} w atchdog retrybooting show	show s port w atchdog retry booting state
port {port_num} w atchdog bootretries set {num}	sets port w atchdog retry boot timeout
port {port_num} w atchdog bootretries show	how s port w atchdog retry boot timeout
radius	enters cmd group "radius"
radius {PRIMARY=0 SECONDARY=1} enabled set <off=0/on=1>	enables radius client
radius {PRIMARY=0 SECONDARY=1} enabled show	show if radius client enabled
radius {PRIMARY=0 SECONDARY=1} server set "<dns_name>"	sets radius server address
radius {PRIMARY=0 SECONDARY=1} server show	show s radius server address
radius {PRIMARY=0 SECONDARY=1} passw ord set "{passw d}"	sets radius server shared secret
radius {PRIMARY=0 SECONDARY=1} passw ord hash set "{passw d}"	sets radius server crypted shared secret
radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs}	sets server request timeout
radius {PRIMARY=0 SECONDARY=1} auth timeout show	show s server request timeout
radius {PRIMARY=0 SECONDARY=1} retries set {0..99}	sets server number of retries
radius {PRIMARY=0 SECONDARY=1} retries show	show s server number of retries
radius chap enabled set <off=0/on=1>	enables CHAP
radius chap enabled show	show s if CHAP is enabled
radius message auth set <off=0/on=1>	enables request message authentication
radius message auth show	show s if request message authentication is enabled
radius default timeout set {num_secs}	sets default session timeout (w hen not returned as Session-Timeout Attribute)
radius default timeout show	show s default session timeout
snmp	enters cmd group "snmp"
snmp port set {ip_port}	sets SNMP UDP port

# Specifications

snmp port show	show s SNMP UDP port	
snmp snmpget enabled set {OFF=0 ON=1}	enables SNMP GET cmds on/off	
snmp snmpget enabled show	show if SNMP GET cmds are enabled	
snmp snmpset enabled set {OFF=0 ON=1}	enables SNMP SET cmds on/off	
snmp snmpset enabled show	show if SNMP SET cmds are enabled	
snmp snmpv2 enabled set {OFF=0 ON=1}	enables SNMP v2 on/off	
snmp snmpv2 enabled show	show if SNMP v2 is enabled	
snmp snmpv2 public set "{text}"	enables SNMP v3 on/off	
snmp snmpv2 public show	show if SNMP v3 is enabled	
snmp snmpv2 private set "{text}"	sets SNMP v2 public community	
snmp snmpv2 private show	show s SNMP v2 public community	
snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	sets sysLocation/sysName/sysContact	
snmp system {CONTACT=0 NAME=1 LOCATION=2} show	gets sysLocation/sysName/sysContact	
snmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community	
snmp snmpv3 enabled show	show s SNMP v2 private community	
snmp snmpv3 username set "{text}"	sets SNMP v3 username	
snmp snmpv3 username show	show s SNMP v3 username	
snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5}	sets SNMP v3 authentication	
snmp snmpv3 authalg show	show SNMP v3 authentication algorithm	
snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm	
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm	
snmp snmpv3 authpasswd set "{passwd}"	sets SNMP v3 authentication password	
snmp snmpv3 privpasswd set "{passwd}"	sets SNMP v3 privacy password	
snmp snmpv3 authpasswd hash set "{passwd}"	sets SNMP v3 authentication hashed password	
snmp snmpv3 privpasswd hash set "{passwd}"	sets SNMP v3 privacy hashed password	
snmp trap type set {NONE=0 V1=1 V2=2 V3=3}	sets type of SNMP traps	
snmp trap type show	show SNMP trap type	
snmp trap receiver {trap_num} set "{dns_name}"	sets address and port of SNMP trap receiver {trap_num}	
snmp trap receiver {trap_num} show	show address and port of SNMP trap receiver {trap_num}	
syslog	enters cmd group "syslog"	
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off	
syslog enabled show	show if syslog enabled	
syslog server set "{dns_name}"	sets address of syslog server	
syslog server show	show s address of syslog server	
system	enters cmd group "system"	
system restart	restarts device	
system fabsettings	restore fab settings and restart device	
system bootloader	enters bootloader mode	
system flushdns	flush DNS cache	
system uptime	number of seconds the device is running	
system name show	show s device name	
system version show	show s actual firmware version	
system display {disp_num} default extsensor {port_num} {sen_type} set {sen_field}	show s external sensor	
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	show s other contents	
system display {disp_num} default show	show s default setting for display	
system display default hash set "{data}"	sets hashed display setting	
system display default hash show	show s hashed display setting	
system sensor {VSYS=0 VAUX=1 VMAIN=2 TCPU=3} show	show s internal sensors if model supports it	
system {SWITCH_PORT=0} events set {OFF=0 ON=1}	enable global events	
system {SWITCH_PORT=0} events show	show s if global events enabled	
system {SWITCH_PORT=0} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_...}	enables different event types	

# Specifications

VT\_DISPLAY=6,EVT\_CONSOLE=7,EVT\_MQTT=8}

system {SWITCH_PORT=0} events type show	show s w hat event types are enabled	
system {SWITCH_PORT=0} events mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
system {SWITCH_PORT=0} events mqtt retain show	show s if mqtt retain set	
system panel enabled set {OFF=0 ON=1}	blocks panel buttons w hen not enabled	
system panel enabled show	show s if panel buttons are enabled	
system panel port all set {OFF=0 ON=1}	enable siw tch all relays from panel buttons	
system panel port all show	show s if siw tch all relays from panel buttons enabled	
timer	enters cmd group "timer"	
timer enabled set {OFF=0 ON=1}	enables timer functions	
timer enabled show	show s if timer a enabled	
timer syslog facility set {0..23}	sets facility level for timer syslog	
timer syslog facility show	show s facility level for timer syslog	
timer syslog verbose set {0..7}	sets verbose level for timer syslog	
timer syslog verbose show	show s verbose level for timer syslog	
timer {rule_num} enabled set {OFF=0 ON=1}	enables rule	
timer {rule_num} enabled show	show s if rule is enabled	
timer {rule_num} name set "{name}"	sets name of rule	
timer {rule_num} name show	show s name of rule	
timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-mm-dd}"	sets date range of rule	
timer {rule_num} {FROM=0 UNTIL=1} show	show s date range of rule	
timer {rule_num} trigger jitter set {0..65535}	sets jitter for rule	
timer {rule_num} trigger jitter show	show jitter of rule	
timer {rule_num} trigger random set {0..100}	sets probability for rule	
timer {rule_num} trigger random show	show s rule probability	
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list	
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	show s time date list	
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets sw itch or cli cmd	
timer {rule_num} action mode show	show s if sw itch or cli cmd	
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for sw itch cmd	
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	show s port list for sw itch cmd	
timer {rule_num} action delay set {0..65535}	delay betw een cmds	
timer {rule_num} action delay show	show s delay betw een cmds	
timer {rule_num} action console set "{cmd}"	sets cmd string	
timer {rule_num} action console show	show s cmd string	
timer {rule_num} action hash set "{data}"	sets action binary form	
timer {rule_num} action hash show	show s action binary form	
timer {rule_num} delete	delete one timer	
timer delete all	delete all timer	
vt100	enters cmd group "vt100"	
vt100 echo set {OFF=0 ON=1}	sets console echo state	
vt100 echo show	show s console echo state	
vt100 numeric set {OFF=0 ON=1}	sets numeric mode	
vt100 numeric show	show s numeric mode state	
vt100 reset	resets terminal	

## Notes

1. Legacy - The command has been replaced by a newer version
2. Command can be entered on any level

3. The output may show 2 lines - the 1st line shows the actual state, the 2nd line the status after reboot
4. The output may show several lines
5. N/A
6. Please see the **External Type and External Sensor Field Tables** for the correct sensor index

## External Sensor Type Table "{sen\_type}"

Constants "{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204, 7208
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205, 7209
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206, 7210

## External Sensor Field Table "{sen\_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

## 4.3 HTTP Authentication

---

In the past, only *HTTP Basic Access Authentication* was supported as password authentication for Gude devices. Now cookie-based *Session Authentication* is used by default. This has the following advantages:

- Clicking on the "Logout" tab now mandatorily results in having to provide user name and password again to get into the device. This is often not the case with *Basic Access Authentication* because it is under the control of the web browser.
- *Session Authentication* is less susceptible to cross-site scripting. In addition, enhanced security can be configured by using a *CSRF-Token*.
- Combined with *Session Authentication* is a configurable logout time, where the login page is automatically referred to after inactivity.


### Configuration of the Session Authentication

Session Timeout (admin):  (seconds)  
Session Timeout (user):  (seconds)  
Select Authentication Mode:  ▾

You can select the automatic logout times in case of inactivity and the Session


Authentication mode in the Ethernet configuration (sub-selection HTTP Server). If the logout time is zero, there is no automatic logout. The authentication modes are:

1. **Basic Compatible:** Basic Access and Session Authentication are accepted.
2. **Session:** Only Session Authentication is allowed.
3. **Session Extended:** A CSRF-Token token is required in addition to Session Authentication.

 **Session** and **Session Extended** modes behave slightly differently in the web interface: If you open a new browser tab for a running session in **Session** mode, no new login is required. In **Session Extended** mode, if a new tab is opened, the user name and password must be re-entered. This is because the CSRF-Token is stored locally to the tab in the web browser.

## Compatibility with previous Basic Accesses

- In **Basic Compatible** mode, normal accesses with Basic Access Authentication are possible. Also everything may be accessed with a HTTP GET request. This leads to compatibility with controllers and drivers already on the market that communicate with Gude devices.
- If not accessed with Basic Access Authentication but with Session Authentication, CGI queries with passwords, configuring the device and switching relays are no longer allowed with HTTP GET requests. A POST request must be used.

 If you have logged in to the web interface once with Session Authentication, the system will automatically try to work with Session Authentication. If you want to use Basic Access Authentication, you must first delete the session cookies and then access a page that is not the login page.

## Authentication examples

To demonstrate how scripts can perform the different authentication modes, here are command line examples using curl:

### Basic Access Authentication

```
curl -u "admin:test" "192.168.0.10/status.json?components=16"
```

### Session Authentication with Cookies

```
curl --cookie-jar sess_cook_curl.txt -d "username=admin&password=test" \
  192.168.0.10/login.json
curl --cookie sess_cook_curl.txt 192.168.0.10/status.json?components=16
```

### Session authentication with cookies and CSRF-Token

```
curl --cookie-jar sess_cook_curl.txt -d "username=admin&password=test" \
  192.168.0.10/login.json
brings a JSON output like: {"login":1,"sessionidX":"a4b9cfc54b273b2af3ba84b8f413b6e9","user_id":1,"href":"dashboard.html"}

curl --cookie sess_cook_curl.txt -d "components=16&cmd=1&p=1&s=0" -H \
  "sessionidX: a4b9cfc54b273b2af3ba84b8f413b6e9" 192.168.0.10/status.json
```



In this example, the CSRF-Token sessionIdX from the output of the first curl call was added as an additional header in the second curl call.

## 4.4 IP ACL

---

### IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, only the hosts and subnets whose IP addresses are registered in the list, can contact via HTTP or SNMP, and make changes. For incoming connections from unauthorized PCs, the device is not completely transparent. Due to technical restraints, a TCP/IP connection will be accepted at first, but then rejected directly.

Examples:

Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access the device
1234:4ef0:eec1:0::/64	all devices of subnet "1234:4ef0:eec1:0::/64" can access the device



If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

## 4.5 IPv6

---

### IPv6 Addresses

IPv6 addresses are 128 bit long and thus four times as long as IPv4 addresses. The first 64 bit form a so-called prefix, the last 64 bit designate a unique interface identifier. The prefix is composed of a routing prefix and a subnet ID. An IPv6 network interface can be reached under several IP addresses. Usually this is the case under a global address and the link local address.

### Address Notation

IPv6 addresses are noted in 8 hexadecimal blocks at 16 bit, while IPv4 normally is noted in decimal. The separator is a colon, not a period.

E.g.: 1234:4ef0:0:0:0019:32ff:fe00:0124

Leading zeros may be omitted within a block. The previous example can be rewritten as:

1234:4ef0:0:0:19:32ff:fe00:124

One may omit one or more successive blocks, if they consist of zeros. This may be done only once within an IPv6 address!

1234:4ef0::19:32ff:fe00:124

One may use the usual decimal notation of IPv4 for the last 4 bytes:

1234:4ef0::19:32ff:254.0.1.36

## 4.6 Messages

---

Depending on adjustable events, various messages can be sent from the device. The following message types are supported:

- Sending of e-mails
- SNMP Traps
- Syslog messages

### E-Mail messages

Email messages are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

### SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

### Syslog messages

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (eg. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

	SNMP Trap	Console	MQTT	Syslog	Email
<b>Global</b>					
Device started	x	x	x	x	x
Switch port	x	x	x	x	x
Port watchdog status	x	x	x	x	x
Power-over-Ethernet ready	x	x	x	x	x
Power supply status	x	x	x	x	x
Syslog switched on/off				x	
MQTT connection established			x	x	
MQTT connection lost				x	
<b>Value-Threshold</b>					
external sensors Signal inputs	x	x	x	x	x
<b>Time-Interval</b>					
external sensors Signal inputs		x	x		
<b>Value-Delta</b>					
external sensors Signal inputs		x	x		

## SNMP traps

There are common traps for state changes of the same device resource. For example, a SwitchEvtPort trap is sent when a port is turned on or off. The state change itself is conveyed by the supplied data within the trap.

## MQTT published data

Messages on the MQTT channel are sent in JSON format.

Example switch a port: `{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}`

## Console Push Messages

Push messages can be activated on the console channels (Telnet, SSH or serial console), which output sensor values at timed intervals (every n seconds) or as of a configurable change in the magnitude of the sensor value on that channel. The generated message always starts with a "#" and ends with a CR/LF.


Example: Switch a port: `#port 2 ON`


If you open a telnet or SSH connection, the push messages are either preconfigured, or you switch on the push messages temporarily with `console telnet pushmsgs set 1` (or `console ssh pushmsgs set 1`). From now on, push messages will be sent asynchronously on this channel. The asynchronous nature of the messages can cause problems on a connection if you send commands yourself at the same time. There are then the possibilities:

- Filter all incoming characters between "#" and CR/LF
- or open a second channel (Telnet, SSH, serial) and switch on the push messages there.



## 4.7 Modbus TCP


 **Important:** All calculations in this chapter are based on addresses starting at "0". For some Modbus TCP Utilities, however, the addresses start at 1, in which case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

 **Important:** If an attempt is made to access registers that do not exist for the respective device, then an access error will occur. If a device has e.g. 8 relays, then only the first eight coils can be accessed without error!

If Modbus TCP is activated in the configuration, the ports (relays, outputs, eFuses) can be switched and the following data is callable:

### Address range overview:

Device Resource	Start	End	Modbus Data Type
Power/Output/eFuse Ports	0x000	0x3ff	Coils
DC Inputs	0x400	0x7ff	Discrete Inputs
Stop Condition active	0x800	0x800	Discrete Inputs
POE active	0x801	0x801	Discrete Inputs
Status Power Sources	0x1000	0x100f	Discrete Inputs
OVP active (Line-Ins)	0x1010	0x101f	Discrete Inputs
Fuse ok	0x1020	0x102f	Discrete Inputs
ETS Input Power nominal	0x1030	0x1031	Discrete Inputs
eFuse Errors	0x1100	0x11ff	Discrete Inputs
Info Area	0x000	0x005	Input Registers
CPU Sensor values	0x080	0x083	Input Registers
External Sensors	0x100	0x1ff	Input Registers
Fan Level	0x200	0x20f	Input Registers
Line Energy Sensors	0x400	0x39ff	Input Registers
Port Energy Sensors	0x3a00	0x81ff	Input Registers
Bank Energy Sensors	0x8200	0x823f	Input Registers
Power Source Sensors	0x8240	0x827f	Input Registers
Residual Current Monitor	0x8280	0x82cf	Input Registers
Bank Power Source Select	0x000	0x00f	Holding Registers
Fan Mode	0x010	0x01f	Holding Registers

 This chapter is general for all Gude devices. Depending on the device type, some ports or certain sensors are not available.

The Unit-ID is ignored because the device is uniquely identified by its IP address.

### Supported Modbus TCP Functions

Function	Request Code
Read Coils	0x01
Read Discrete Inputs	0x02

# Specifications

Write Single Coil	0x05
Write Multiple Coils	0x0f
Read Input Registers	0x04
Read Holding Registers	0x03
Write Holding Register	0x06
Write Multiple Holding Registers	0x10
Read Device Identification	0x2B / 0x0E

## Coils

Device Resource	Start	End	Device Function
Power/Output/eFuse	0x000	0x3ff	Coil represents Port State

## Discrete Inputs

Device Resource	Start	End	Function when set
DC Inputs	0x400	0x7ff	Input logically 1
Stop Condition active	0x800	0x800	Stop Input active
POE active	0x801	0x801	POE active
Status Power Sources	0x1000	0x100f	Power Source active
OVP active (Line-Ins)	0x1010	0x101f	OVP active
Fuse ok	0x1020	0x1020	Fuse functional (ETS 8801)
ETS Input Power normal	0x1030	0x1031	Voltage nominal (ETS 8801)
eFuse Error	0x1100	0x11ff	eFuse Error (EPC 8291)

### DC Inputs:

The DC inputs can be found in the *Discrete Inputs*. The inputs are arranged as follows:

Input:  $0x0400 + \text{Port} * 0x40 + \text{Input-number}$  (starts with zero).

Port is the number of the external sensor port. For inputs permanently installed in the device, Port = 0.

Example for the first input at external input sensor in port 2:  $0x400 + 2 * 0x40 + 0 = 0x480$

### Status Power Sources:

Power Sources	Offset
EPC 8221 / 8226	0 = Bank A, 1 = Bank B
ENC 2111 / 2191	0 = Pwr1, 1 = Pwr2
ESB 7213 / 7214	0 = Pwr1, 1 = Pwr2 (only 7214)

## Input Registers

Device Resource	Start	End	Function
Info Bereich	0x000	0x005	see table
CPU Sensor values	0x080	0x083	see table
Externe Sensoren	0x100	0x1ff	see table
Fan Level	0x200	0x20f	0 (aus) bis 3 (maximal)
Line Energy Sensors	0x400	0x39ff	see table
Port Energy Sensors	0x3a00	0x81ff	see table
Bank Energy Sensors	0x8200	0x823f	see table
Power Source Sensors	0x8240	0x827f	see table
Residual Current Monitor	0x8280	0x82cf	see table

## Info Area

Address	Width	Information
0	16-bit	Number of Ports (Relay)
1	16-bit	Number of Ports (Outlets) with Energy Measurement
2	16-bit	Number of Banks
3	16-bit	Number of Line-In
4	16-bit	Phases per line
5	16-bit	Number of Inputs

## Sensor Type Description

Address	Width	Information
0x080 to 0x083	16-bit (signed)	CPU Sensor values
0x100 to 0x1ff	16-bit (signed)	external Sensors
0x400 to 0x39ff	32-bit (signed)	Line Energy Sensors
0x3a00 to 0x81ff	32-bit (signed)	Port Energy Sensors
0x8200 to 0x823f	16-bit (signed)	Bank Energy Sensors
0x8240 to 0x827f	16-bit (signed)	Power Source Energy Sensors
0x8280 to 0x82cf	16-bit (signed)	Residual Current Monitor

## CPU Sensor Values


Offset	Sensor Field	Unit
0	Vsystem	0.01 V
1	Vaux	0.01 V
2	Vmain	0.01 V
3	CPU Temperature	0.1 °C

## External Sensors:

The measured value of the external sensors are coded as fixed point arithmetic. For a factor of e.g. 0.1 in the unit the value must be divided by 10 in order to reach the real measured value. A value of 0x8000 means that no sensor is plugged into the corresponding port, or the corresponding field in the sensor is not available. The formula for the address is (the port numbers start at zero):

# Specifications


$0x100 + \text{Port} * 8 + \text{Offset}$

 In the Expert Sensor Box 7213 / 7214 the internal sensor corresponds to the value Port = 0, and is coded Port = 1 for Sensor 2 and Port = 2 for Sensor 3.

Offset	Sensor Field	Unit
0	Temperature	0.1 °C
1	Humidity	0.1 %
2	Digital Input	bool
3	Air Pressure	1 hPa (millibar)
4	Dew Point	0.1 °C
5	Dew Point Difference	0.1 °C

For example, the humidity of the second port has the address:  $0x100 + 1 * 8 + 1 = 0x109$


## Energy Sensors:

 This applies to devices that support 230V input measurement (Line) and/or devices that support 230V output measurement (Port).

We distinguish the line sensors (which correspond to the input circuits) and the port sensors, which measure the energy that is passed over the switched port. The measured values of the energy sensors are returned as signed 32-bit integers. The high-order 16-bits are starting on the even address, followed by the low-order 16-bits on the odd address. To calculate the address, there are the following formulas (the values for line, port and phase start at zero):

Line:  $0x0400 + \text{Line} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$

Port:  $0x3a00 + \text{Port} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$

 For devices with only one phase, the phase is set to zero in the formula.

## Examples:

"Power Active" for 1st line sensor and 3rd phase:  $0x400 + 0 * 0x120 + 2 * 0x60 + 1 * 2 = 0x4C2$


"Voltage" for 2nd line sensor and single phase device:  $0x400 + 1 * 0x120 + 2 * 2 = 0x524$

"Power Angle" for 4th port sensor and single phase device:  $0x3a00 + 3 * 0x120 + 6 * 2 = 0x3d6c$

Offset	Sensor Field	Unit
0	Absolute Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	mA
4	Frequency	0.01 hz

# Specifications

5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Absolute Active Energy Resettable	Wh
10	Absolute Reactive Energy	VARh
11	Absolute Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Forward Active Energy	Wh
14	Forward Reactive Energy	VARh
15	Forward Active Energy Resettable	Wh
16	Forward Reactive Energy Resettable	VARh
17	Reverse Active Energy	Wh
18	Reverse Reactive Energy	VARh
19	Reverse Active Energy Resettable	Wh
20	Reverse Reactive Energy Resettable	VARh
21	Residual Current Type A	0.1 mA
22	Neutral Current	0.1 mA

 Whether the measured values "Residual Current" and "Neutral Current" are supported depends on the respective device model. For measured values such as "Neutral Current", which are independent of the phase, the same value is returned for all phases.

## DC Energy Sensors:

With the EPC 8291 / 8290 devices, the voltage and current of the individual banks and voltage sources can be read out. The measured values of the energy sensors are returned as signed 16-bit integers. The following formulas are available for the address (the values for Bank and PowerSrc start at zero):

Bank:  $0x8200 + \text{Bank} * 2 + \text{Offset}$

Power Source:  $0x8240 + \text{PowerSrc} * 2 + \text{Offset}$

## Examples:

"Voltage" at third bank:  $0x8200 + 2 * 2 + 0 = 0x8204$

"Current" at first PowerSrc:  $0x8240 + 0 * 2 + 1 = 0x8241$

Offset	Sensor Field	Unit
0	Voltage	0.01 V
1	Current	mA

## Residual Current Monitor Type B (RCMB):

Devices with a Residual Current Monitor Type B (RCMB) module separately measure the RMS and DC fault current components of the input supply. The values are returned as signed 16-bit integers. The following formulas are used for the address (the module number starts at zero):

# Specifications


Bank:  $0x8280 + \text{ModuleNo} * 8 + \text{Offset}$ .

## Examples:

"Residual Current DC" at first module:  $0x8280 + 0 * 8 + 1 = 0x8281$ .


"Output DC" for second module:  $0x8280 + 1 * 8 + 3 = 0x828b$

Offset	Addr. Module 0	Sensor Field	Unit
0	0x8280	Residual Current RMS Type B	0.1 mA
1	0x8281	Residual Current DC Type B	0.1 mA
2	0x8282	Output RMS	bool
3	0x8283	Output DC	bool
4	0x8284	Module State	

 Whether a Residual Current Monitor Type B (RCMB) module is present depends on the particular device model.

## Holding Registers

Device Resource	Start	End	Function
Bank Power Source	0x000	0x00f	Sets Power Source for Bank
Fan Mode	0x010	0x01f	0 = Automatic / 1 = Maximum

 Bank Power Source applies to EPC 8291 and ETS 8801 models. Only the EPC 8291 model has a fan.

## Device Identification

Returns manufacturer name and device identification:


Request Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Object Id	1 Byte	0x00

Response Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Conformity Level	1 Byte	0x01
More Follows	1 Byte	0x00
NextObjectID	1 Byte	0x00
Number of Objects	1 Byte	0x03
Object ID	1 Byte	0x00
Object Length	1 Byte	n1
Object Value	n1 Bytes	"Company Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n2
Object Value	n2 Bytes	"Product Id"

# Specifications

Object ID	1 Byte	0x00
Object Length	1 Byte	n3
Object Value	n3 Bytes	"Product Version"

## 4.7.1 Sensor Tables

 **Important:** All calculations in this chapter are based on addresses starting at "0". With some Modbus TCP utilities the addresses start at 1. In this case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

### External sensors addresses (Input Register)

Sensor field	Port 1	Port 2	Port 3	Port 4
Temperature	0x100	0x108	0x110	0x118
Humidity	0x101	0x109	0x111	0x119
Digital input	0x102	0x10a	0x112	0x11a
Air Pressure	0x103	0x10b	0x113	0x11b
Dew Point	0x104	0x10c	0x114	0x11c
Dew Point Difference	0x105	0x10d	0x115	0x11d

A value of 0x8000 means that no sensor is plugged into the corresponding port or the corresponding field in the sensor is not available.

## 4.8 MQTT

This device supports MQTT 3.1.1 to send configured messages and also to receive commands. This chapter is general for all Gude devices, some Gude models do not have switchable ports.

- Default port for an unencrypted connection is port 1883.
- Default port for a TLS secured connection is port 8883.
- If the broker allows anonymous login, username and password are arbitrary, but a username must be specified.
- If multiple MQTT clients are connected to a broker, the names of the clients must be different. For this reason, "client\_xxxx" is generated as the default name. Here "xxxx" are the last 4 digits of the MAC address.

### Message format

The MQTT messages of the device are always sent in JSON format. E.G..

```
{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}
```

This is a switching of the second port to the state on. The source of the switching command is CGI ("http"). The index is always numeric, "port" can also be alphanumeric for devices with multiple banks, e.g. "A2". At the end follows a timestamp ("ts"), which indicates the number of seconds the device is on, or unixtime if the device has synchronized with an NTP server.


## MQTT Topic Prefix

The topic prefix for the messages can be set in the MQTT configuration. A default would be e.g. "de/gudesystems/epc/[mac]". Here "[mac]" is a placeholder for the MAC address of the device, another possible placeholder is "[host]", which contains the host name. An example topic for a switching message of the second port would then be:

```
"de/gudesystems/epc/00:19:32:01:16:41/switch/2".
```

## Executing console commands


The device can be controlled remotely via MQTT using console commands. A list of all commands can be found in the [Console](#) chapter. Depending on the topic, the commands are accepted in different formats.

 As default the execution of commands is not allowed, but must be enabled in the MQTT configuration! ("Permit CLI commands")

### Format 1: Command in JSON Syntax

```
Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd"  
Publish Message: "{\"type\": \"cli\", \"cmd\": \"port 2 state set 1\", \"id\": 10}"
```

```
Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres"  
"{\"type\": \"cli\", \"cmdres\": [\"OK.\"], \"result\": {\"num\": 0, \"hint\": \"ok\"}, \"id\": 10}"
```

 The JSON object "result" returns whether the command was valid. The object "id" in the command is optional and is passed through in the response from the device. The passed number can help to establish a synchronicity between command and response via the broker.

### Format 2: Raw Text


```
Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/cli"  
Publish Message: "port 2 state set 1".
```

```
Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/cli"  
"OK."
```

### Format 3: Simplified port switching

```
Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/port/2"  
Publish Message: "0" or "1".
```

```
Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/port/2"  
"0" or "1"
```

 This special form exists only for the port switching commands.



## Device Data Summary

In the **Device Data Summary** the most important data of the device are summarized in a JSON object and sent periodically in a configurable time interval. This summary depends on the properties of the device and the connected sensors, and could look like this:

Topic: `en/gudesystems/epc/00:19:32:01:16:41/device/telemetry`

Message:

```
{
  "type": "telemetry",
  "portstates": [{
    "port": "1",
    "name": "Power Port",
    "state": 1
  }, {
    "port": "2",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "3",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "4",
    "name": "Power Port",
    "state": 0
  }],
  "line_in": [{
    "voltage": 242.48,
    "current": 0.000
  }],
  "sensors": [{
    "idx": 1,
    "name": "7105",
    "data": [{
      "field": "temperature",
      "v": 21.1,
      "unit": "deg C"
    }, {
      "field": "humidity",
      "v": 71.9,
      "unit": "%"
    }, {
      "field": "dew_point",
      "v": 15.8,
      "unit": "deg C"
    }, {
      "field": "dew_diff",
      "v": 5.3,
      "unit": "deg C"
    }
  ]
}],
  "ts": 210520
}
```

### 4.8.1 Example HiveMQ

What does an MQTT configuration look like using HiveMQ as an example?

# Specifications

### Cluster Details [Back to clusters](#)

Overview **Access Management** Getting started

---

#### Details

Hostname:

Port (TLS): 8883

Port (Websocket + TLS): 8884

Create a free or commercial account at [www.hivemq.com](http://www.hivemq.com) and create a new cluster.

### Active MQTT Credentials

These credentials give access to publish and subscribe to your HiveMQ Cloud cluster.

Username	Password	Actions
<input type="text" value="epc-user"/>	<input type="password" value="*****"/>	<input type="button" value="x"/>

In the "Manage Clusters" section, go to "Access Management" and add an MQTT user with name and password.

### MQTT

Enable MQTT:  yes  no

Broker:

TLS:  yes  no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▾

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands:  yes  no

Publish device data summary interval:  s (0=disabled)

In the MQTT configuration of the Gude device, transfer the hostname of the HiveMQ broker, as well as username and password. Additionally activate TLS and set the correct port.

## 4.9 Radius

The passwords for HTTP, telnet, and serial console (depending on the model) can be stored locally and / or authenticated via RADIUS. The RADIUS configuration supports a

primary server and a backup server. If the primary server does respond, the RADIUS request is sent to the backup server. If the local password and RADIUS are enabled at the same time, the system is first checking locally, and then in the event of a failure the RADIUS servers are contacted.

## RADIUS attributes

The following RADIUS attributes are evaluated by the client:

**Session-Timeout:** This attribute specifies (in seconds) how long an accepted RADIUS request is valid. After this time has elapsed, the RADIUS server must be prompted again. If this attribute is not returned, the default timeout entry from the configuration is used instead. Please set this value to 300 seconds or greater to prevent the radius requests from becoming too large.

**Filter-Id:** If the value "admin" is set for this attribute, then an admin rights are assigned for the login, otherwise only user access.

**Service-Type:** This is an alternative to Filter-Id. A service type of "6" or "7" means admin rights for the HTTP login, otherwise only limited user access.

## HTTP Login

The HTTP login takes place via Basic Authentication. This means that it is the responsibility of the web server, how long the login credentials are temporarily stored there. The RADIUS parameter "Session-Timeout" therefore does not determine when the user has to login again, but at what intervals the RADIUS servers are asked again.

## 4.10 SNMP

---

SNMP can be used for status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios etc., or the simple command line tools of NET-SNMP software. The device supports SNMP protocols v1, v2c and v3. If traps are enabled in the configuration, the device messages are sent as notifications (traps). SNMP Informs are not supported. SNMP Requests are answered with the same version with which they were sent. The version of the sent traps can be set in the configuration.

### MIB Tables

The values that can be requested or changed by the device, the so-called "Managed Objects", are described in Management Information Bases (MIBs). These substructures are subordinate to so-called "OID" (Object Identifiers). An OID digit signifies the location of a value inside a MIB structure. Alternatively, each OID can be referred to with its symbol name (subtree name). The device's MIB table can be displayed as a text file by clicking on the link "MIB table" on the SNMP configuration page in the browser.

## SNMP v1 and v2c


SNMP v1 and v2c authenticates the network requests by so-called communities. The SNMP request has to send along the so-called community public for queries (read access) and the community private for status changes (write access). The SNMP communities are read and write passwords. In SNMP v1 and v2 the communities are transmitted unencrypted on the network and can be easily intercepted with IP sniffers within this collision domain. To enforce limited access we recommend the use of DMZ or IP-ACL.

## SNMP v3

Because the device has no multiuser management, only one user (default name "standard") is detected in SNMP v3. From the User-based Security Model (USM) MIB variables, there is a support of "usmStats ..." counter. The "usmUser ..." variables will be added with the enhancement of additional users in later firmware versions. The system has only one context. The system accepts the context "normal" or an empty context.


### Authentication

The algorithms "HMAC-MD5-96" and "HMAC-SHA-96" are available for authentication. In addition, the "HMAC-SHA-2" variants (RFC7630) "SHA-256", "SHA-384" and "SHA-512" are implemented.

 "SHA-384" and "SHA512" are calculated purely in software. If "SHA-384" or "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

### Encryption

The methods "DES", "3DES", "AES-128", "AES-192" and "AES-256" are supported in combination with "HMAC-MD5-96" and "HMAC-SHA-96." For the "HMAC-SHA-2" protocols, there is currently neither RFC nor draft that will allow for cooperation with an encryption.

 While in the settings "AES-192" and "AES256" the key calculation is based on "draft-blumenthalphoto-aes-usm-04", the methods "AES 192-3DESKey" and "AES 256-3DESKey" utilize a key generation, which is also used in the "3DES" configuration ("draft-reeder-snmpv3-usm-3desede-00"). If one is not an SNMP expert, it is recommended to try in each case the settings with and without "...- 3DESKey".

### Passwords


The passwords for authentication and encryption are stored only as computed hashes for security reasons. Thus it is, if at all, very difficult to infer the initial password. However, the hash calculation changes with the set algorithms. If the authentication or privacy algorithms are changed, the passwords must be re-entered in the configuration dialog.

### Security

The following aspects should be considered:

- If encryption or authentication is used, then SNMP v1 and v2c should be turned off. Otherwise the device could be accessed with it.
- If only authentication is used, then the new "HMAC-SHA-2" methods are superior to the MD5 or SHA-1 hashing algorithms. Since only SHA-256 is accelerated in hardware, and SHA-384 and SHA-512 are calculated purely in software, one should normally select SHA-256. From a cryptographic point of view, the security of SHA-256 is sufficient for today's usage.
- For SHA-1, there are a little less attack scenarios than MD5. If in doubt, SHA-1 is preferable.
- Encryption "DES" is considered very unsafe, use only in an emergency for reasons of compatibility!
- For cryptologists it's a debatable point whether "HMAC-MD5-96" and "HMAC-SHA-96" can muster enough entropy for key lengths of "AES-192" or "AES-256".
- From the foregoing considerations, we would recommend at present "HMAC-SHA-96" with "AES-128" as authentication and encryption method.

## Change in Trap Design

 In older MIB tables, a separate trap was defined for each combination of an event and a port number. This results in longer lists of trap definitions for the devices. For example, from **epc8221SwitchEvtPort1** to **epc8221SwitchEvtPort12**. Since new firmware versions can generate many more different events, this behavior quickly produces several hundred trap definitions. To limit this overabundance of trap definitions, the trap design has been changed to create only one specific trap for each event type. The port or sensor number is now available in the trap as an index OID within the variable bindings.

In order to recognize this change directly, the "Notification" area in the MIB table has been moved from sysObjectID.0 to sysObjectID.3. This way, unidentified events are generated until the new MIB table is imported. For compatibility reasons, SNMP v1 traps are created in the same way as before.

## NET-SNMP

NET-SNMP provides a very widespread collection of SNMP command-line tools (snmpget, snmpset, snmpwalk etc.) NET-SNMP is among others available for Linux and Windows. After installing NET-SNMP you should create the device-specific MIB of the device in NET-SMP share directory, e.g. after

```
c:\usr\share\snmp\mibs
```

or


```
/usr/share/snmp/mibs
```

So later you can use the 'subtree names' instead of OIDs:

```
Name: snmpwalk -v2c -mALL -c public 192.168.1.232 gudeads
```

```
OID: snmpwalk -v2c -mALL -c public 192.168.1.232 1.3.6.1.4.1.28507
```

## NET-SNMP Examples

 These examples refer to Gude devices that have switchable ports.

Query Power Port 1 switching state:

```
snmpget -v2c -mALL -c public 192.168.1.232 epc822XPortState.1
```

Switch on Power Port 1:

```
snmpset -v2c -mALL -c private 192.168.1.232 epc822XPortState.1 integer 1
```

## 4.10.1 Device MIB 2111

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.60.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	Description	OID	Type	Acc.
enc2111TrapCtrl	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3	.60.1.1.1.1.0	Integer32	RW
enc2111TrapIPIndex	A unique value, greater than zero, for each receiver slot.	.60.1.1.1.2.1.1.x	Integer32	RO
enc2111TrapAddr	DNS name or IP address specifying one Trap receiver slot. A port can optionally be specified: 'name:port' An empty string disables this slot.	.60.1.1.1.2.1.2.x	OCTETS	RW
enc2111portNumber	The number of Relay Ports	.60.1.3.1.1.0	Integer32	RO
enc2111PortIndex	A unique value, greater than zero, for each Relay Port.	.60.1.3.1.2.1.1.x	Integer32	RO
enc2111PortName	A textual string containing name of a Relay Port.	.60.1.3.1.2.1.2.x	OCTETS	RW
enc2111PortState	current state of a Relay Port	.60.1.3.1.2.1.3.x	INTEGER	RW
enc2111PortSwitchCount	The total number of switch actions occurred on a Relay Port. Does not count switch commands which will not switch the relay state, so just real relay switches are displayed here.	.60.1.3.1.2.1.4.x	Integer32	RO
enc2111PortStartupMode	set Mode of startup sequence (off, on, remember last state)	.60.1.3.1.2.1.5.x	INTEGER	RW
enc2111PortStartupDelay	Delay in sec for startup action	.60.1.3.1.2.1.6.x	Integer32	RW
enc2111PortRepowerTime	Delay in sec for repower port after switching off	.60.1.3.1.2.1.7.x	Integer32	RW
enc2111PortResetDuration	Delay in sec for turning Port on again after Reset action	.60.1.3.1.2.1.8.x	Integer32	RW
enc2111ActiveInputs	Number of supported Input Channels.	.60.1.5.6.1.0	Unsigned32	RO
enc2111InputIndex	None	.60.1.5.6.2.1.1.x	Integer32	RO
enc2111Input	Input state of device	.60.1.5.6.2.1.2.x	INTEGER	RO
enc2111InputName	A textual string containing name of the Input	.60.1.5.6.2.1.32.x	OCTETS	RW
enc2111State12V	Show state of internal 12V	.60.1.5.7.1.0	INTEGER	RO
enc2111State3V	Show state of internal 3.3V	.60.1.5.7.2.0	INTEGER	RO

enc2111POE	signals POE availability	.60.1.5.10.0	INTEGER	RO
enc2111PwrSupplyIndex	Index of Power Supply entries	.60.1.5.13.1.1.x	Integer32	RO
enc2111PwrSupplyStatus	shows status of the Power Supply 1 = fst, 2 = snd etc.	.60.1.5.13.1.2.x	INTEGER	RO
enc2111NTPTimeValid	Show if valid Time is received	.60.1.5.15.1.0	INTEGER	RO
enc2111NTPUnixTime	show received NTP time as unixtime (secs since 1 January 1970)	.60.1.5.15.2.0	Unsigned32	RO
enc2111NTPLastValidTimestamp	show seconds since last valid NTP timestamp received	.60.1.5.15.3.0	Unsigned32	RO
enc2111SensorIndex	None	.60.1.6.1.1.1.x	Integer32	RO
enc2111TempSensor	actual temperature	.60.1.6.1.1.2.x	Integer32	RO
enc2111HygroSensor	actual humidity	.60.1.6.1.1.3.x	Integer32	RO
enc2111InputSensor	logical state of input sensor	.60.1.6.1.1.4.x	INTEGER	RO
enc2111AirPressure	actual air pressure	.60.1.6.1.1.5.x	Integer32	RO
enc2111Dew Point	dew point for actual temperature and humidity	.60.1.6.1.1.6.x	Integer32	RO
enc2111Dew PointDiff	difference between dew point and actual temperature (Temp - Dew Point)	.60.1.6.1.1.7.x	Integer32	RO
enc2111ExtSensorName	A textual string containing name of a external Sensor	.60.1.6.1.1.32.x	OCTETS	RW
enc2111ExtActiveInputs	Number of supported Input Channels.	.60.1.6.2.1.0	Unsigned32	RO
enc2111ExtInputIndex	None	.60.1.6.2.2.1.1.x	Unsigned32	RO
enc2111ExtInput	Input state of device	.60.1.6.2.2.1.2.x	INTEGER	RO
enc2111ExtInputName	A textual string containing name of the Input	.60.1.6.2.2.1.32.x	OCTETS	RW
enc2111ExtInputPortNum	Number of external Sensor Port when value greater zero, else device built-in Input.	.60.1.6.2.2.1.33.x	Integer32	RO
enc2111ExtInputBlockIndex	Either index of device built-in Input, or index of Input in external sensor.	.60.1.6.2.2.1.34.x	Integer32	RO

## 4.11 SSL

### TLS Standard

The device is compatible with TLS v1.1 to TLS v1.3 standards, but due to lack of security, SSL v3.0, TLS 1.0, and RC4, MD5, SHA1, and DES encryption are disabled. All ciphers use Diffie-Hellman key exchange (Perfect Forward Secrecy).

### Creating your own Certificates

The SSL stack is supplied with a specially newly generated self-signed certificate. There is no function to generate the local certificate anew at the touch of a button, since the required random numbers in an embedded device are usually not independent enough. However, you can create new certificates and import them to the device. The server accepts RSA (2048/4096) and ECC (Elliptic Curve Cryptography) certificates.

Usually OpenSSL is used to create an SSL certificate. For Windows for example, there is the light version of Shining Light Productions. There you open a command prompt, change to the directory "C:\OpenSSL-Win32\bin" and set these environment variables:

```
set openssl_conf=C:\OpenSSL-Win32\bin\openssl.cfg
set RANDFILE=C:\OpenSSL-Win32\bin\.rnd
```


Here are some examples for the generation with OpenSSL:

### Creation of a self-signed RSA 2048-bit certificate

```
openssl genrsa -out server.key 2048
openssl req -new -x509 -days 365 -key server.key -out server.crt
```

### RSA 2048-bit certificate with Sign Request:

```
openssl genrsa -out server.key 2048
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

 The server keys should be created with "openssl genrsa". The Gude device processes keys in the traditional PKCS#1 format. This can be recognized by the fact that the generated key file starts with "-----BEGIN RSA PRIVATE KEY-----". If the file starts with "-----BEGIN PRIVATE KEY-----", the file is in PKCS#8 format and the key is not recognized. If you have only a key in PKCS#8 format, you can convert it to PKCS#1 with openssl: "**openssl rsa -in pkcs8.key -out pkcs1.key**".

### ECC Certificate with Sign Request:

```
openssl ecparam -genkey -name prime256v1 -out server.key
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

If you have created your key and certificate, both files are concatenated to one file:


Linux:

```
cat server.crt server.key > server.pem
```

Windows:

```
copy server.crt + server.key server.pem
```

The created server.pem can only be uploaded in the maintenance section of the device.

 If several certificates (Intermediate CRT's) should also be uploaded to the device, one should make sure, that firstly the server certificate and secondly the Intermediates are assembled, e.g:

```
cat server.crt IM1.crt IM2.crt server.key > server.pem
```





An uploaded certificate will be preserved, when a device is put back to factory defaults <sup>26</sup>.

## Performance Considerations

If RSA 4096 certificates are used, the first access to the web server can take 8-10 seconds, because the math unit of the embedded CPU is highly demanded. After that, the parameters are in the SSL session cache, so all other requests are just as fast as with other certificate lengths. For a quick response even on the first access, we recommend RSA 2048-bit certificates that offer adequate security, too.

**Support**

## 5 Support

You will find the latest product software on our website at [www.gude.info](http://www.gude.info) available for download. If you have further questions about installation or operation of the unit, please contact our support team. Furthermore, we present in our support wiki at [www.gude.info/wiki](http://www.gude.info/wiki) FAQs and configuration examples.

### 5.1 Data Security

---

To provide the device with a high level of data security, we recommend the following measures:

- Check that the HTTP password is switched on.
- Set up your own HTTP password.
- Configure HTTP Extended Session Authentication.
- Allow access to HTTP via SSL (TLS) only.
- Use TLS 1.3 if possible and avoid TLS 1.1.
- Enable authentication and encryption in SNMPv3 and disable SNMP v2 access.
- Enable STARTTLS or SSL in the e-mail configuration.
- Archive configuration files securely, they contain sensitive information.
- In the IP ACL, enter only the devices that require access to HTTP or SNMP.
- Use SSH if possible, since Telnet is not encrypted.
- Set login for telnet or serial console.
- Use MQTT 3.1.1 only with TLS and password.
- Only permit MQTT CLI commands when the broker is trustworthy.
- Modbus TCP is not encrypted, only activate it in a secure environment.
- Activate "Message Authentication" in RADIUS.

#### When accessed from the Internet

- Use a randomized password with at least 32 characters.
- If possible, place the device behind a firewall.

### 5.2 HTTP Performance

---

Access to the Gude devices via the REST API can normally be conducted from one source every second with HTTP. If accessed from multiple sources simultaneously, it is recommended to adjust the poll interval accordingly.

#### SSL (TLS) performance

The initial setup for an SSL (TLS) connection results in numerous crypto operations at the start of the connection. If an RSA 2048 certificate is used, the delay at the beginning is about 2-3 seconds, with RSA 4096 the connection establishment can take up to 10 seconds. The delays result from a limitation of the math unit in the embedded CPU. We therefore recommend an ECC 256 certificate, which is significantly more performant to calculate. Previously established connections TLS connections are stored in a TLS Session Cache (or Session Tickets). However, this cache is not always supported by

browsers, or it expires after only a short time. Especially browsers (HTTPS clients) of other embedded devices (e.g. media controllers) may be limited in the TLS cache.

A remedy for this can be an HTTP keep-alive connection. Once a connection with HTTP keep-alive is opened, it is closed again after 10 seconds if no data is transferred. If you want to receive data periodically, it is therefore recommended to request the data at intervals of less than 10 seconds (e.g. every 5-8 seconds) after establishing the connection with HTTP keep-alive.

## Special TLS 1.3 performance problem with Chrome (MS Edge)

When TLS 1.3 and insecure certificates are used in combination with a web browser with Chromium engine (Google Chrome or MS Edge), performance may be affected, resulting in longer loading times. In this constellation, the Chromium Engine does not correctly support the TLS Session Cache (or Session Tickets) and the math unit of the embedded CPU may be overwhelmed with persistent RSA operations. Possible solutions:

- Use secure certificates (official certificate authority or marked as secure in the OS)
- or keep-alive with poll interval less than 10 seconds
- or use of Firefox browser
- or use ECC 256 (no RSA) certificates
- or configure to "TLS v1.2 only"

## 5.3 Contact

---

GUDE Systems GmbH  
Von-der-Wettern-Straße 23  
51149 Cologne  
Germany

Phone: +49-221-985 925 0  
Fax: +49-221-985 925 97  
E-Mail: [info@gude-systems.com](mailto:info@gude-systems.com)  
Internet: [www.gude-systems.com](http://www.gude-systems.com)

Managing Director: Dr.-Ing. Michael Gude, Andreas Boettcher, Philipp Gude

District Court: Köln, HRB-Nr. 17 7 84  
WEEE-number: DE 58173350  
Value added tax identification number (VAT): DE 122778228

## 5.4 Declaration of Conformity

---

This product from the **Expert Net Control 2111** series is in conformity with the European directives for CE marking applicable to this product. The complete CE declaration of conformity for this product can be found on the website [www.gude-systems.com](http://www.gude-systems.com) in the download section of the product.

## 5.5 FAQ

---

### 1. What can I do if the device is no longer accessible?

- If the Status LED is red, the device has no connection to the switch. Unplug and plug the Ethernet cable. If the Status LED is still red, try other switches. If one uses no switch, but connects e.g. a laptop directly to the device, make sure you are using a crossover Ethernet cable.
- If the status LED is orange for a longer time after unplugging and plugging the Ethernet cable, then DHCP is configured, but no DHCP server was found in the network. After a timeout, the last IP address is configured manually.
- If there is a physical link (status LED is green) to the device, but you can not access the web server, bring the device into bootloader mode and search for it with GBL\_Conf.exe<sup>[20]</sup>. Then check the TCP-IP parameters and change them if necessary.
- If the device is not found by GBL\_Conf.exe in bootloader mode, you can reset the settings to factory defaults<sup>[26]</sup> as the last option.

### 2. Why is a device sporadically no longer accessible when DHCP is activated? or Why does the text "DHCP is configured, but DHCP is not responding!" appear?

- If DHCP is enabled but no DHCP server responds, the last IP address continues to be used. However, the DHCP client tries to reach a DHCP server again every 5 minutes. The DHCP request lasts one minute until it is aborted. During this time the IP address is not accessible! With a static IP address, DHCP should therefore be deactivated in the device.

### 3. What can be done if the device is no longer accessible, but the buttons still respond?

- Entering or leaving the bootloader mode does not change the state of the relays. In the chapter Maintenance<sup>[25]</sup> there is a description how to activate the bootloader by pressing the buttons and how to exit the bootloader afterwards. This will restart the firmware without switching relays. However, this procedure does not help if the network itself is incorrectly configured.

### 4. Where is the serial number stored in the device?

The serial number is not stored in the device, but only visible on the device label. However, you can display the MAC address in the IP address configuration<sup>[33]</sup>. If you contact Gude Systems Support with the MAC address, we will be happy to give you the corresponding serial number.

### 5. Why does it sometimes take so long to configure new SNMPv3 passwords on the website?

The authentication methods "SHA-384" and "SHA-512" are calculated purely in software, and can not use the crypto hardware. On the configuration page, e.g. "SHA-512", needs up to 45 seconds to calculate the key.

## 6. Can you enter multiple e-mail recipients?

- Yes. In the E-Mail configuration in the Recipient Address field, it is possible to enter multiple e-mail addresses separated by commas. The input limit is 100 characters.

## 7. Why did the MIB tables change after the firmware update?

- Since the number of possible event types was increased, the previous trap design resulted in an excess of trap definitions: See [Change in Trap Design](#)<sup>[93]</sup>.

## 8. Importing an older firmware

- During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the [Maintenance Page](#)<sup>[23]</sup>). Sometimes the text "**Upload complete, firmware downgrade not compatible**" is displayed during a firmware update. In this special case a downgrade is not possible. This usually happens when a newer hardware component in the device is not supported by an older firmware.

## 9. Disable switching events

- You can set the sending of syslog, emails etc. when switching ports (only concerns Gude devices with relays) under "System" in the sensor configuration<sup>[54]</sup>.

## - A -

Antenna terminal 8  
automated Access 60

## - B -

Bootloader Mode 20, 25  
Button Lock 58

## - C -

Certificate-Upload 20, 23  
clear DNS-Cache 23  
Configuration Management 24  
Content of Delivery 6  
creating certificates 95

## - D -

Data Security 99  
Declaration of Conformity 100  
Default Display 58  
Description 6  
device MIB 94

## - E -

E-Mail 56  
Ethernet connector 8

## - F -

Factory Reset 20  
FAQ 101  
Firmware Upload 20  
Firmware-Update 23

## - G -

GBL\_Conf.exe 20

## - H -

HTTP 36  
HTTP Authentication 76  
HTTP Performance 99  
HTTPS 36

**103**

## - I -

Installation 8  
IP-ACL 35, 78  
IP-Address 33  
IPv6 78

## - L -

load Configuration 23

## - M -

Maintenance 20  
messages 79  
Modbus TCP 81  
MQTT 45, 87

## - N -

NTP 46

## - O -

Ok button 8  
Operating the device directly 17

## - P -

Power Ports 29

## - R -

Radius 90  
Redundant Voltage Supply 10  
Restart 23  
RS232 connector 8

## - S -

Security Advice 6  
Select button 8  
Sensor Calibration 15  
Sensors 11, 54  
signal strength 8  
SIM card slot 8  
SNMP 40, 91  
SSH 65

SSL 95  
Start-up the device 8  
Status LED 8  
Status-LED 17  
syslog 40

## - T -

Technical Specifications 11  
Terminal Assignment 9  
Timer 47  
Timer Configuration 47  
TLS 95

## - W -

Watchdog 30





Expert Net Control 2111  
© 2023 GUDE Systems GmbH  
8/14/2023